




SPARE PARTS MANUAL VAL HEATERS 2012-2013

SPARE PARTS MANUAL VAL HEATERS


CONTENTS:.....	2
VAL 6 1-STEP/2 STEP-main unit.....	3
VAL 6 KB-main unit.....	4
VAL 6 MIDI-main unit.....	5
Parts main unit VAL.....	6
VAL 6 1-STEP/2 STEP-fuel tank.....	7
VAL 6 KB-fuel tank.....	8
VAL 6 MIDI-fuel tank.....	9
Part fuel tank VAL.....	10
VAL 6 1-STEP/2 STEP/KB-burner.....	11/13
VAL 6 MIDI-burner.....	14/15
VAL DAYSTAR-tank.....	16/17
VAL DAYSTAR-combustion unit.....	17/18
VAL DAYSTAR-burner unit.....	19/20
EPX-tank section.....	21/22
EPX-combustion section.....	23/24
EPX -burner section	25/27
IFT 42.....	28




VAL 6 1-STEP / 2-STEP MAIN UNIT

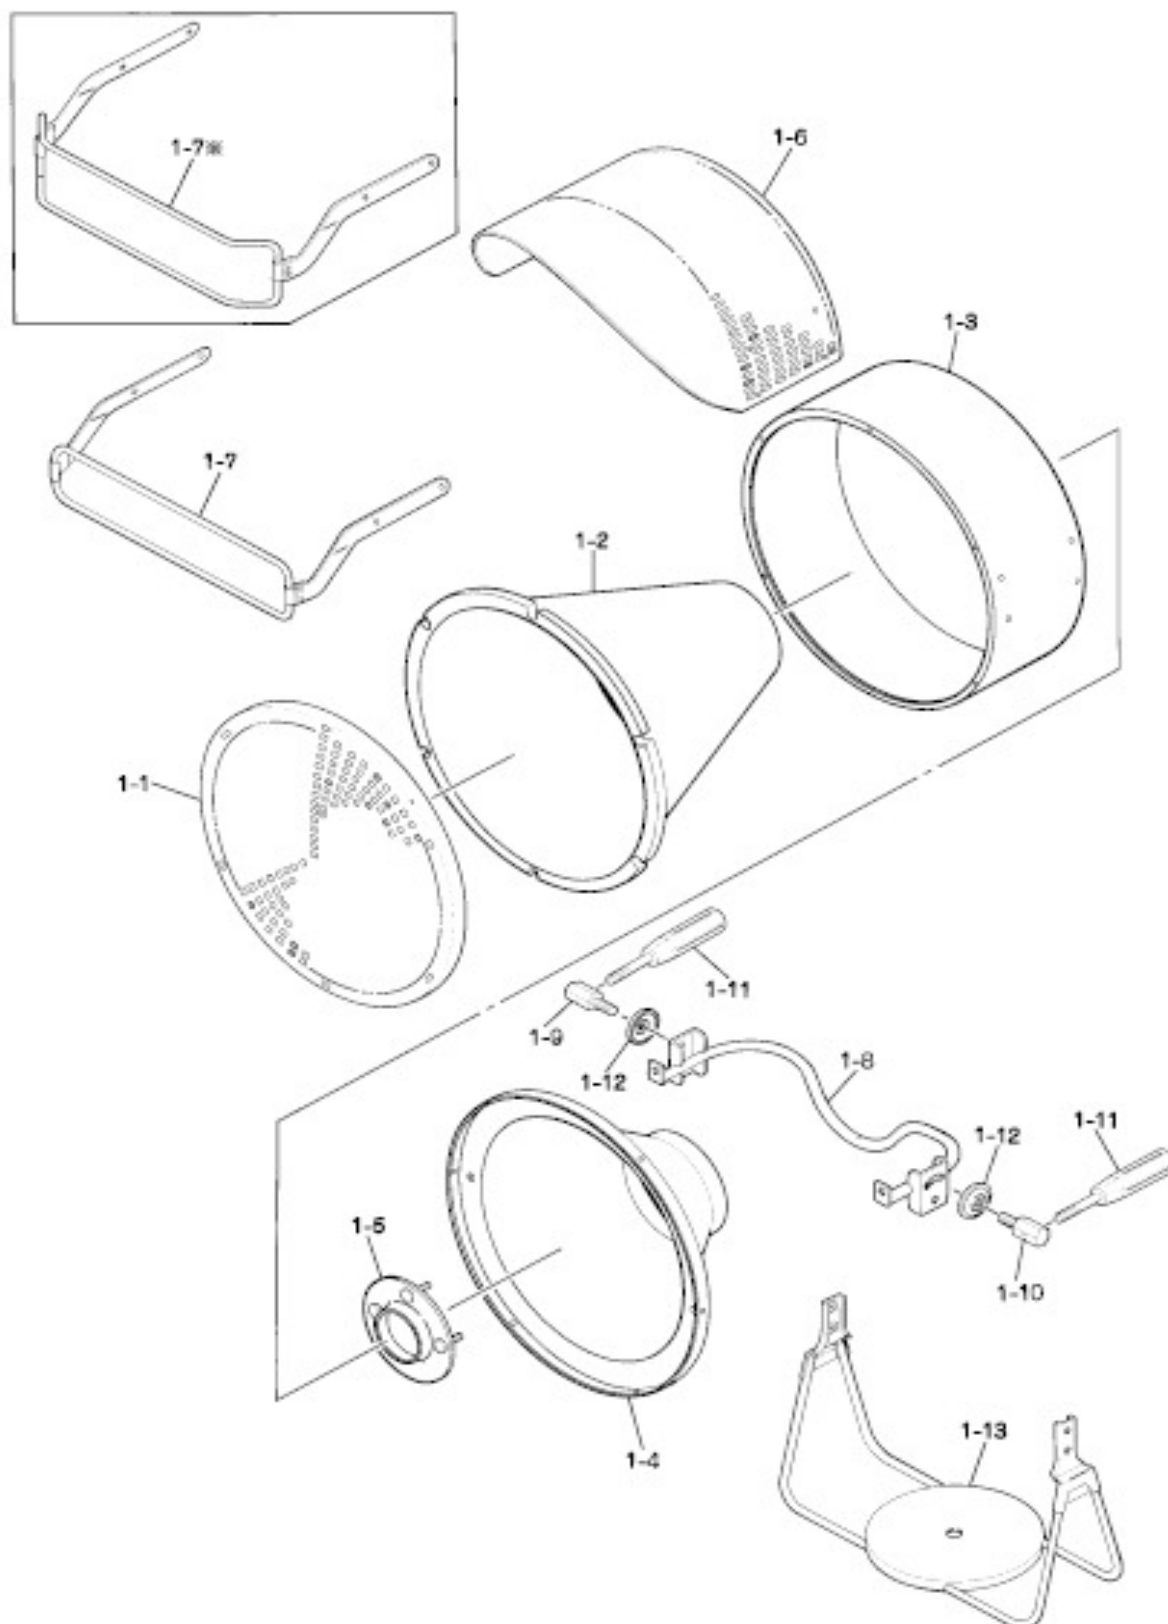

VAL 6 KB MAIN UNIT

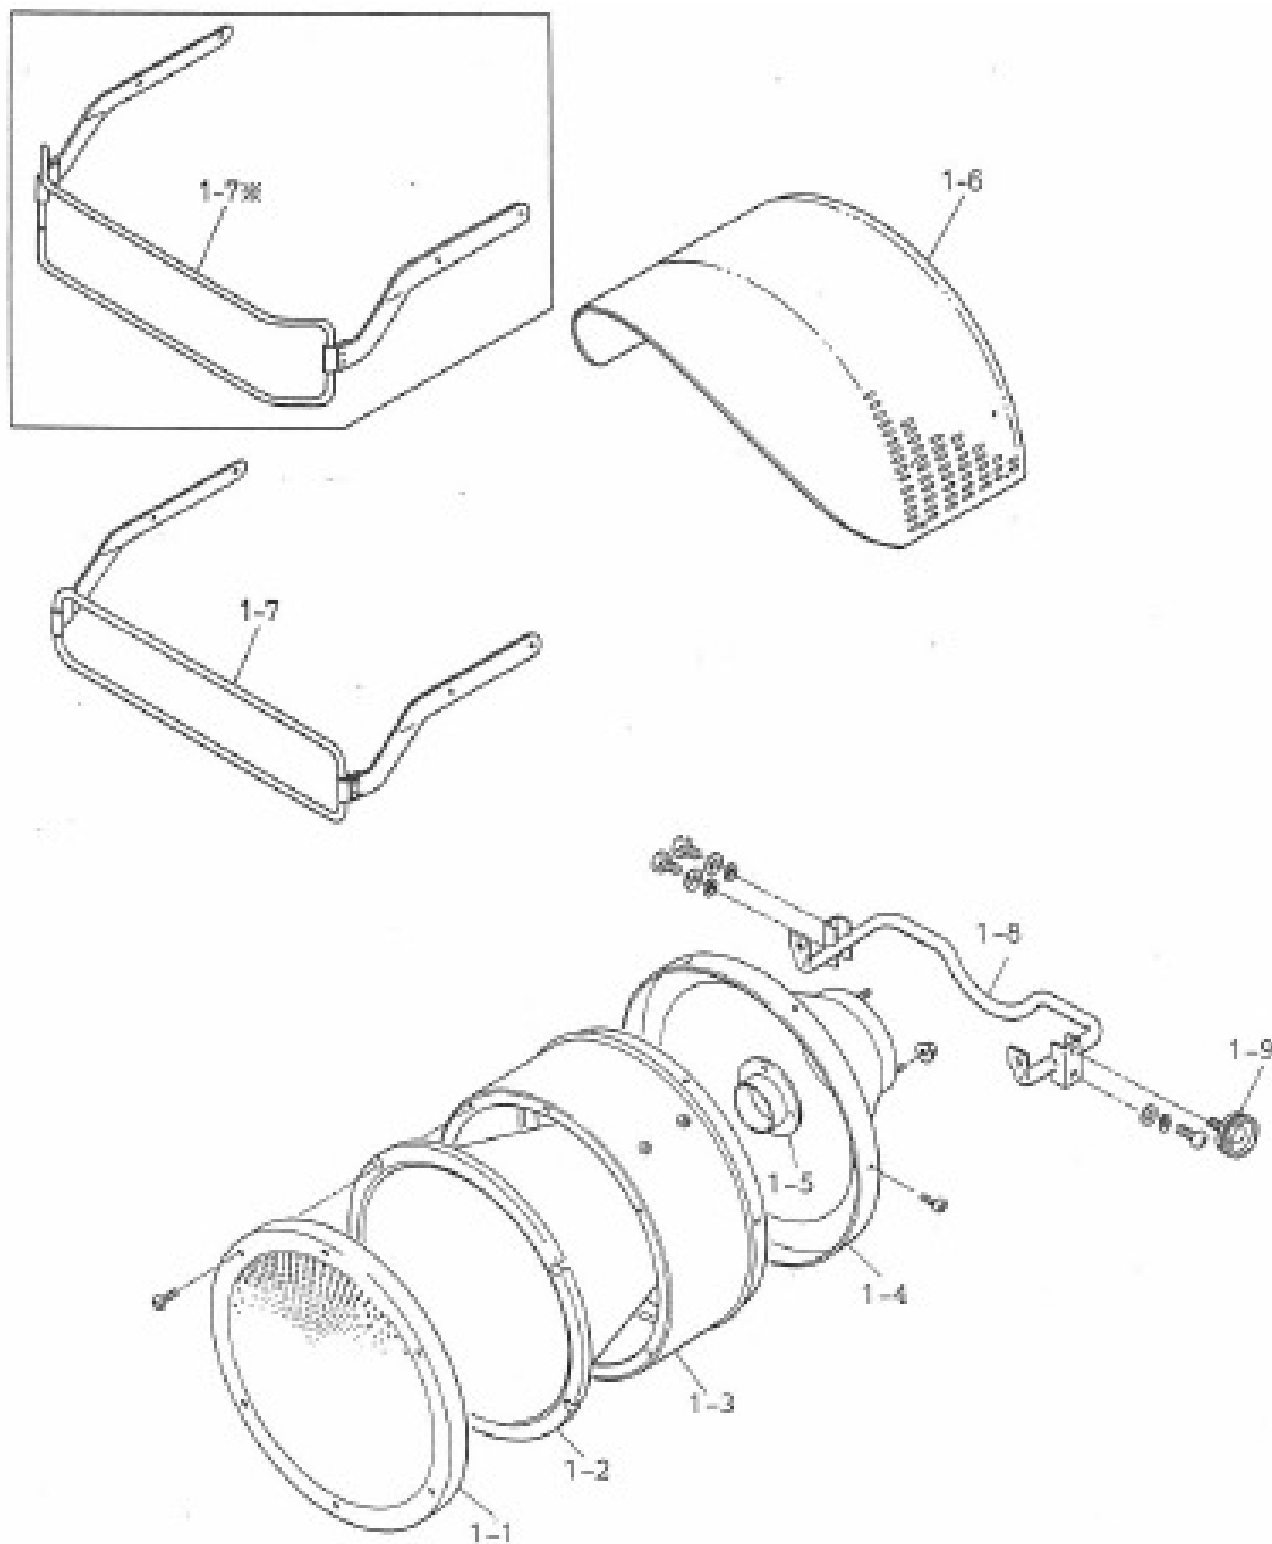

VAL 6 MIDI MAIN UNIT

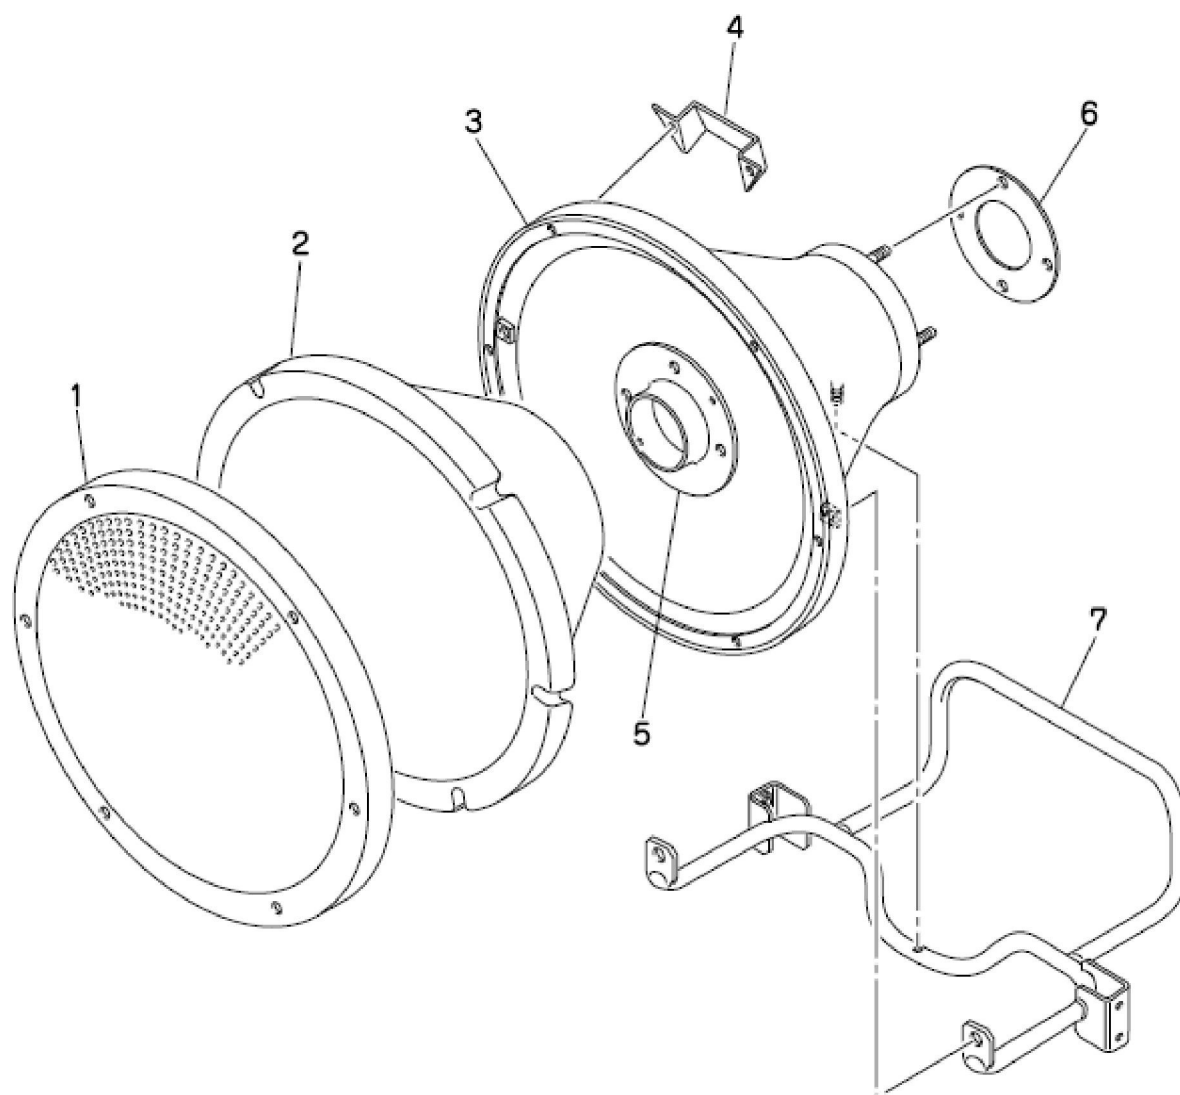


Parts unit main unit VAL


Part number	Pos	Q`-unit	Part name	V-Midi	V-KBE	V-1step	V-2step	Remarks
44.115.473	1-1	1	Radiation disk	•	•	•	•	
44.118.001	2	1	Conical insulator	•				
44.115.481	1-2	1	Conical insulator		•	•	•	
44.115.499	1-3	1	Drum		•	•	•	
44.118.002	3	1	Conical housing	•				Including labelplate
44.115.507	1-4	1	Conical housing		•	•	•	
44.115.515	1-5	1	Burner fitting piece	•	•	•	•	
44.116.224	1-6	1	Visor		•	•	•	
44.115.374	1-6	1	Burner packing	•	•	•	•	Also pos. 3-74
44.116.232	1-7	1	Guard rail		•	•	•	
44.118.005	1-7	1	Burner support	•				
O/R	1-8	1	Burner support		•	•	•	
44.115.549	1-9	1	Clamp bolt (rh)			•	•	
O/R	1-9	1	Angle adjustment bolt		•			M8
44.115.556	1-10	1	Clamp bolt (lh)			•	•	Till 2006/2007 (j-lot)
44.115.564	1-11	1	Clamp lever			•	•	Till 2007 2 pieces
O/R	1-12	2	Washer			•	•	

O/R = On Request


Fuel tank VAL-6 1-step/2-step

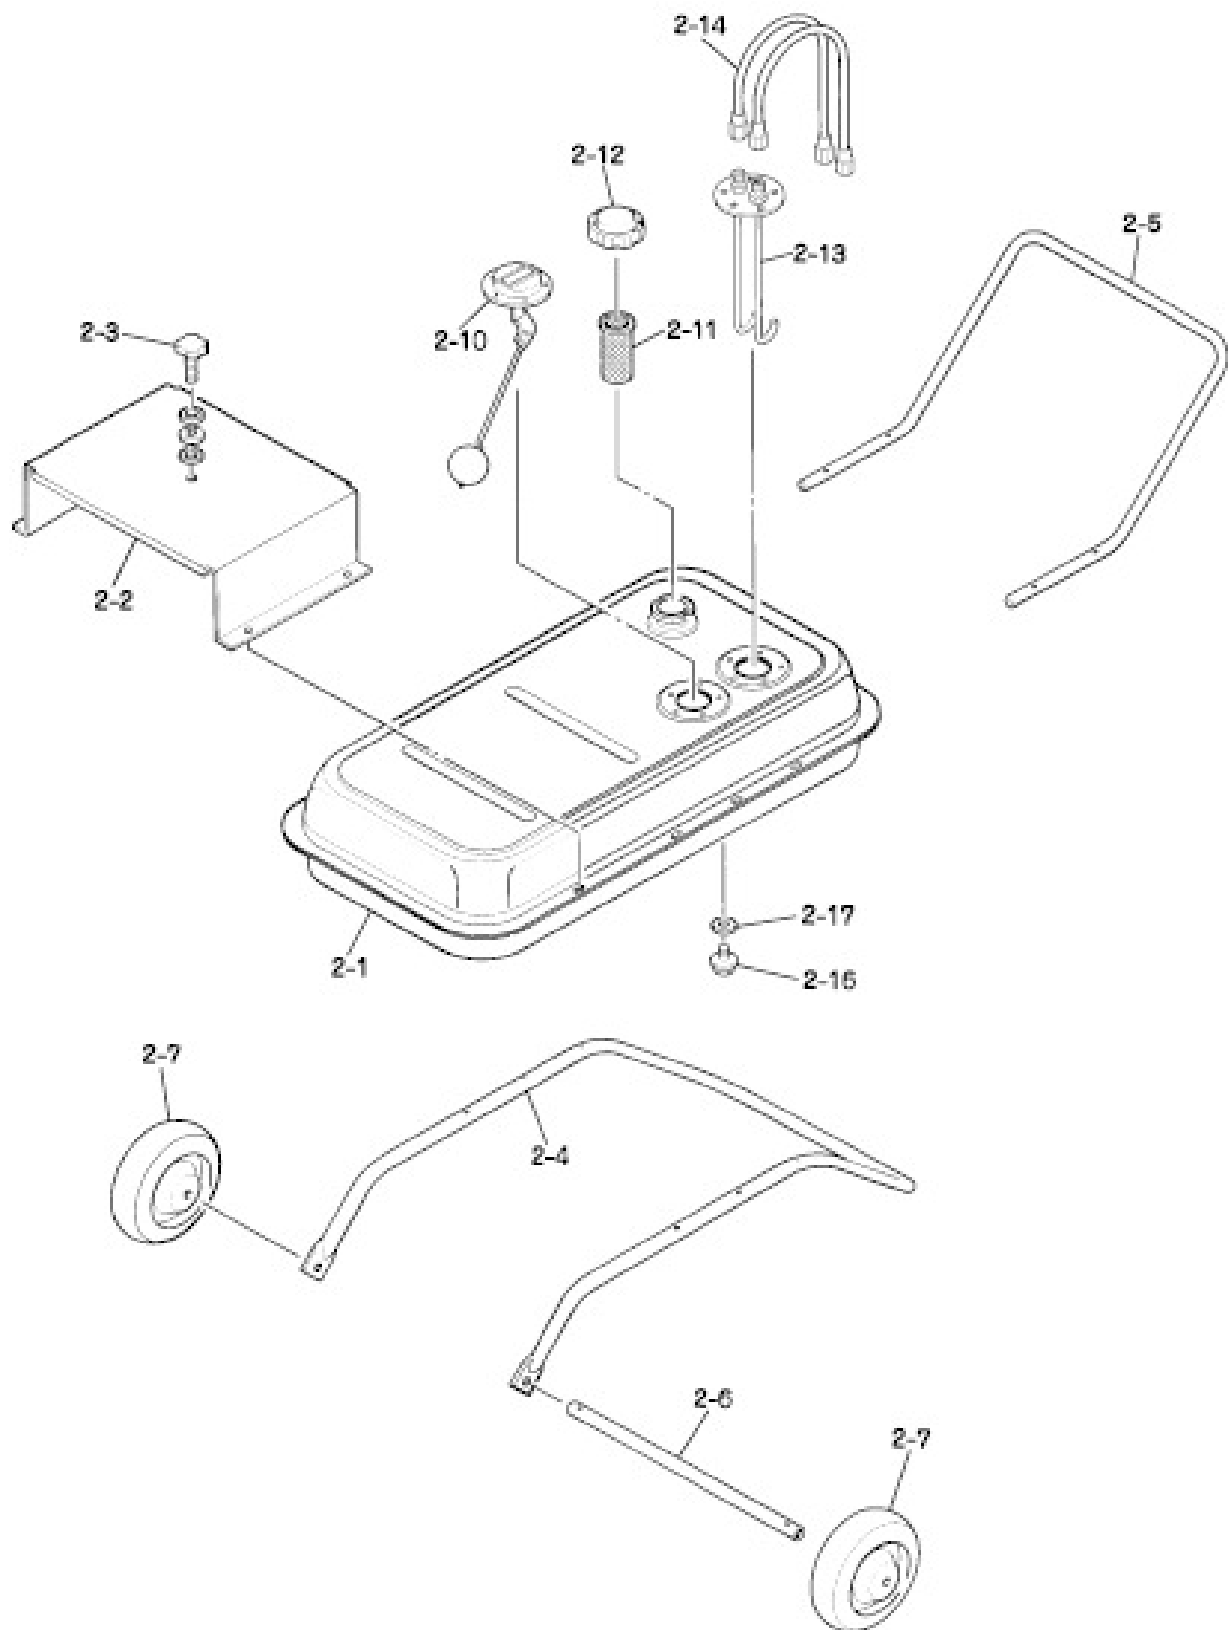

Fuel tank VAL-6 KB

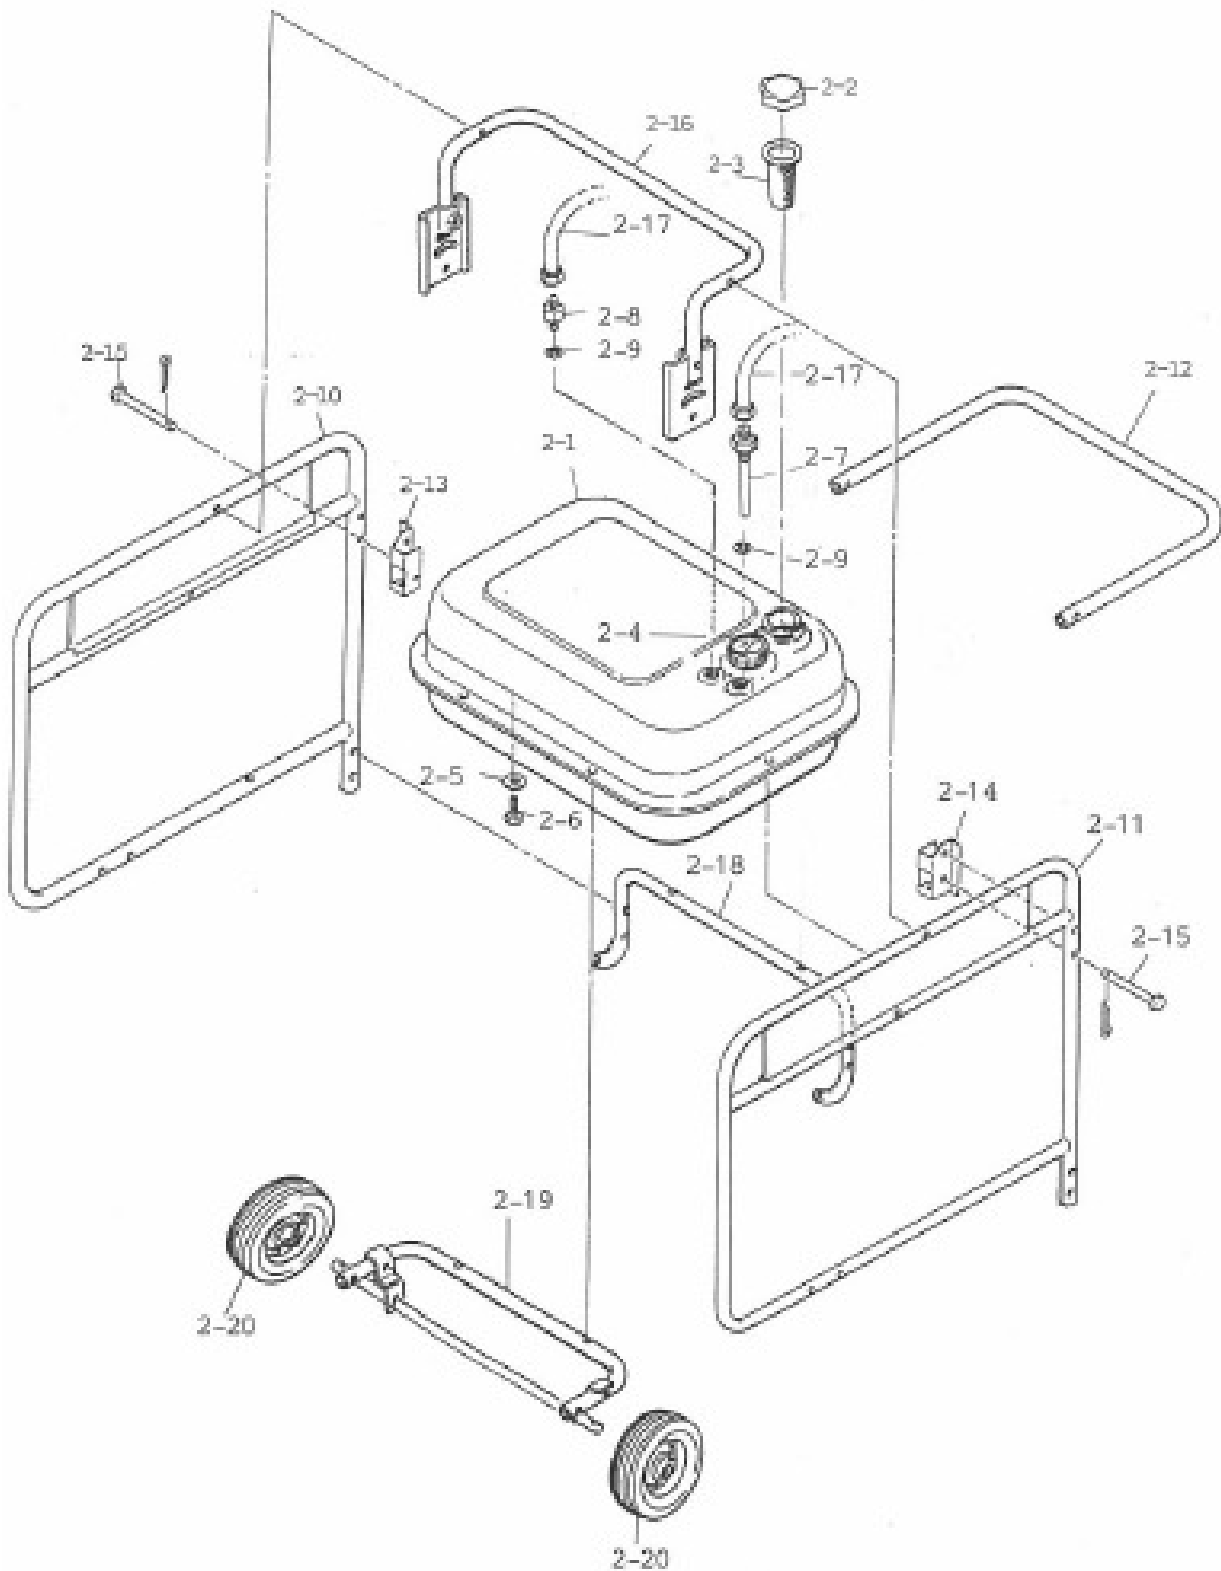


Fuel tank VAL-6 MIDI

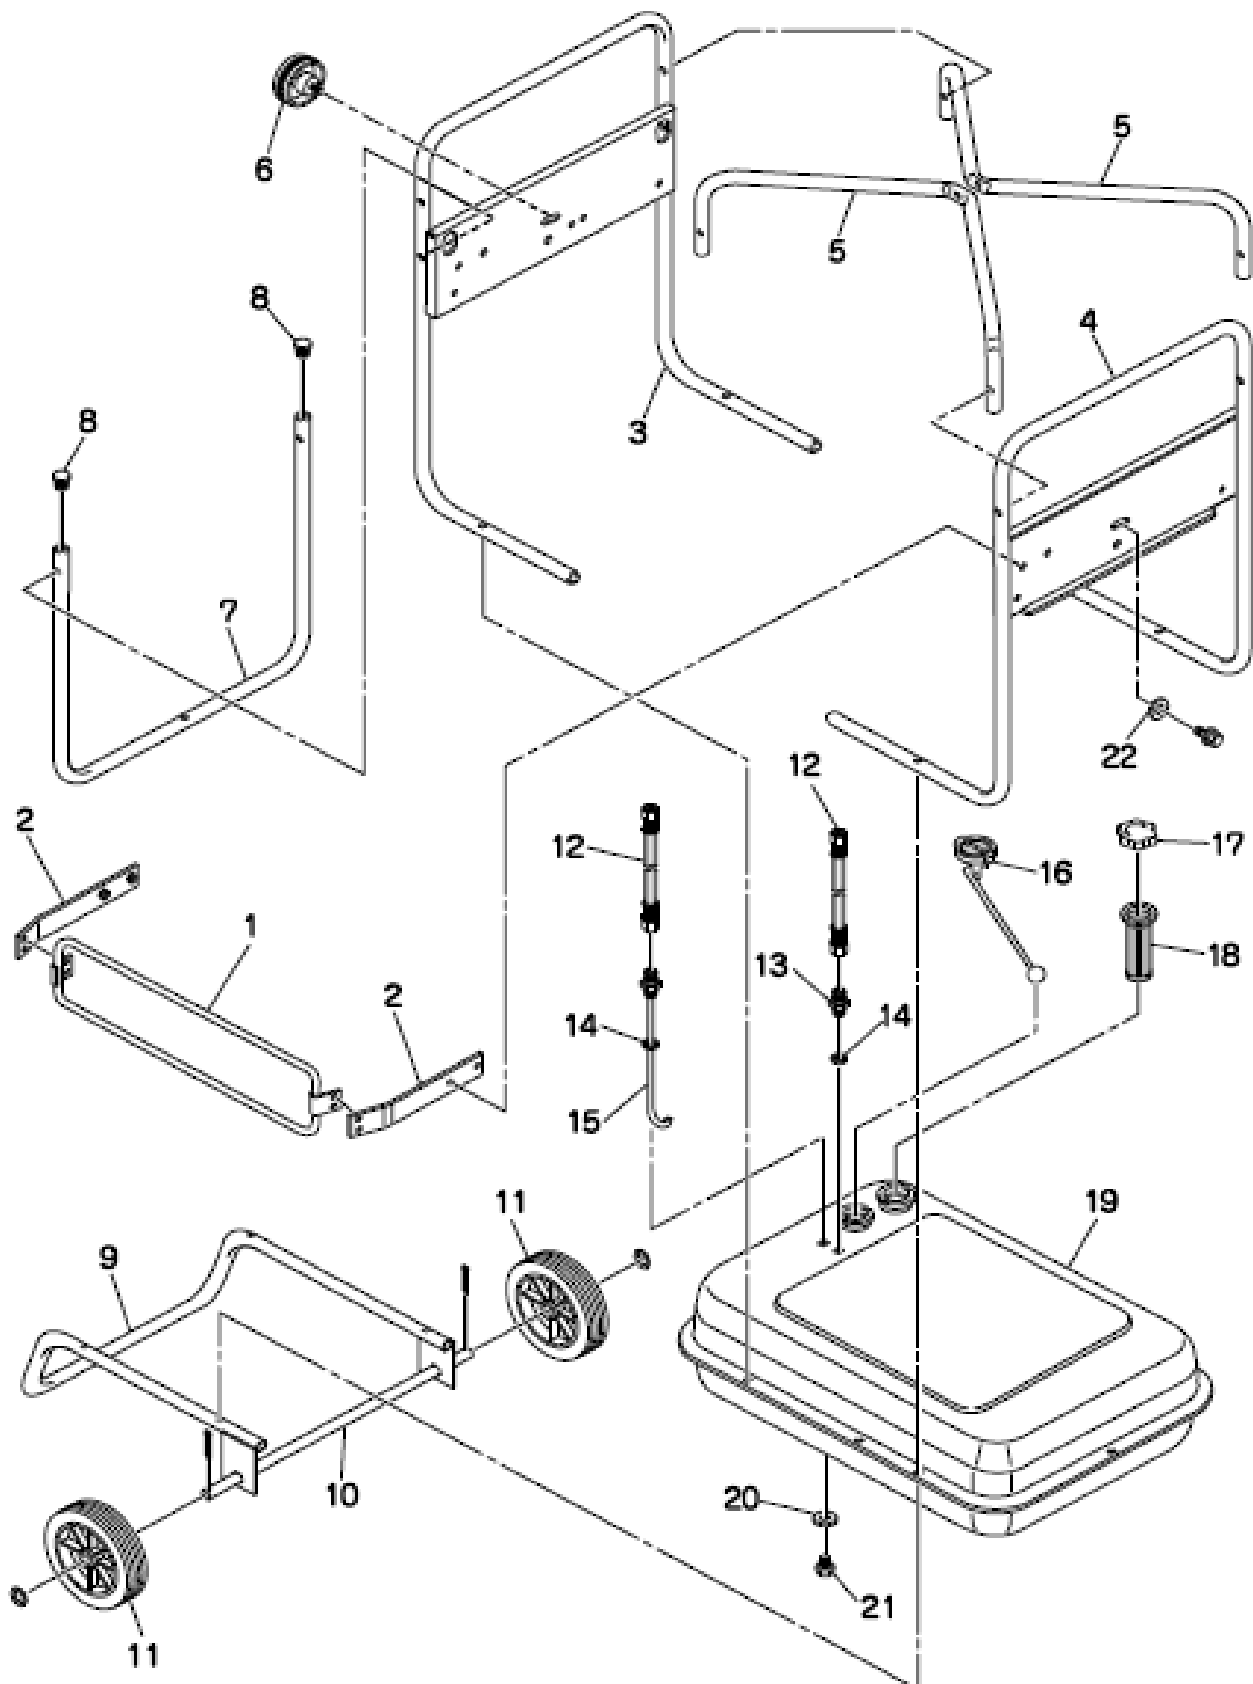

FUEL TANK VAL


Part number	Pos	Q`-unit	Part name	V-Midi	V-KBE	V-1step	V-2step	Remarks
44.115.382	2-1	1	Fuel tank			•	•	40 liters
44.115.383	2-1	1	Fuel tank		•			57 liters
44.118.022	2-19	1	Fuel tank	•				
44.116.167	2-2	1	Swivel base			•	•	
44.115.440	2-2/12	1	Tank cap			•	•	
44.118.055	17	1	Tank cap	•	•			
44.115.432	2-11	1	Tank filter			•	•	
44.118.021	2-3/18	1	Tank filter	•	•			
44.115.465	2-14	2	Fuel hose			•	•	
44.118.016	2-12	2	Fuel hose	•	•			
44.118.020	2-4/16	1	Fuel gauge	•	•			
44.115.424	2-10	1	Fuel gauge			•	•	
44.115.409	2-5/17/20	1	Drain packing	•	•	•	•	M16
44.115.409	2-6/18/21	1	Drain bolt	•	•	•	•	M16
44.118.019	2-7/15	1	Suction pipe	•	•			
44.115.458	2-13	1	Suction pipe			•	•	
44.118.017	2-8/13	1	Return nipple	•	•			
44.118.018	2-9/14	2	Suction packing	•	•			
44.118.006	2-1	1	Protector bracket	•				
44.118.007	2-2	2	Protector support	•				
44.118.008	3-3	1	Frame right	•				
44.118.009	3-4	1	Frame left	•				
44.118.010	2-5	2	Frame connection pipe	•				
44.118.011	3-7	1	Knob bolt	•				
44.118.014	2-9	1	Tank leg	•				
44.116.182	2-2	1	Tank leg			•	•	
44.118.015	2-10	1	Ax	•				
44.116.190	2-5	1	Grip			•	•	
44.115.389	2-6	1	Wheel shaft			•	•	L=583mm
44.115.390	2-7	2	Wheel	•	•	•	•	
44.118.012	2-7	1	Handle	•				
44.118.013	2-8/21	2	Pipe end cap	•	•			
44.115.465	2-14	2	Flex. Oil hose			•	•	
44.118.016	2-12	2	Flex. Oil hose	•	•			

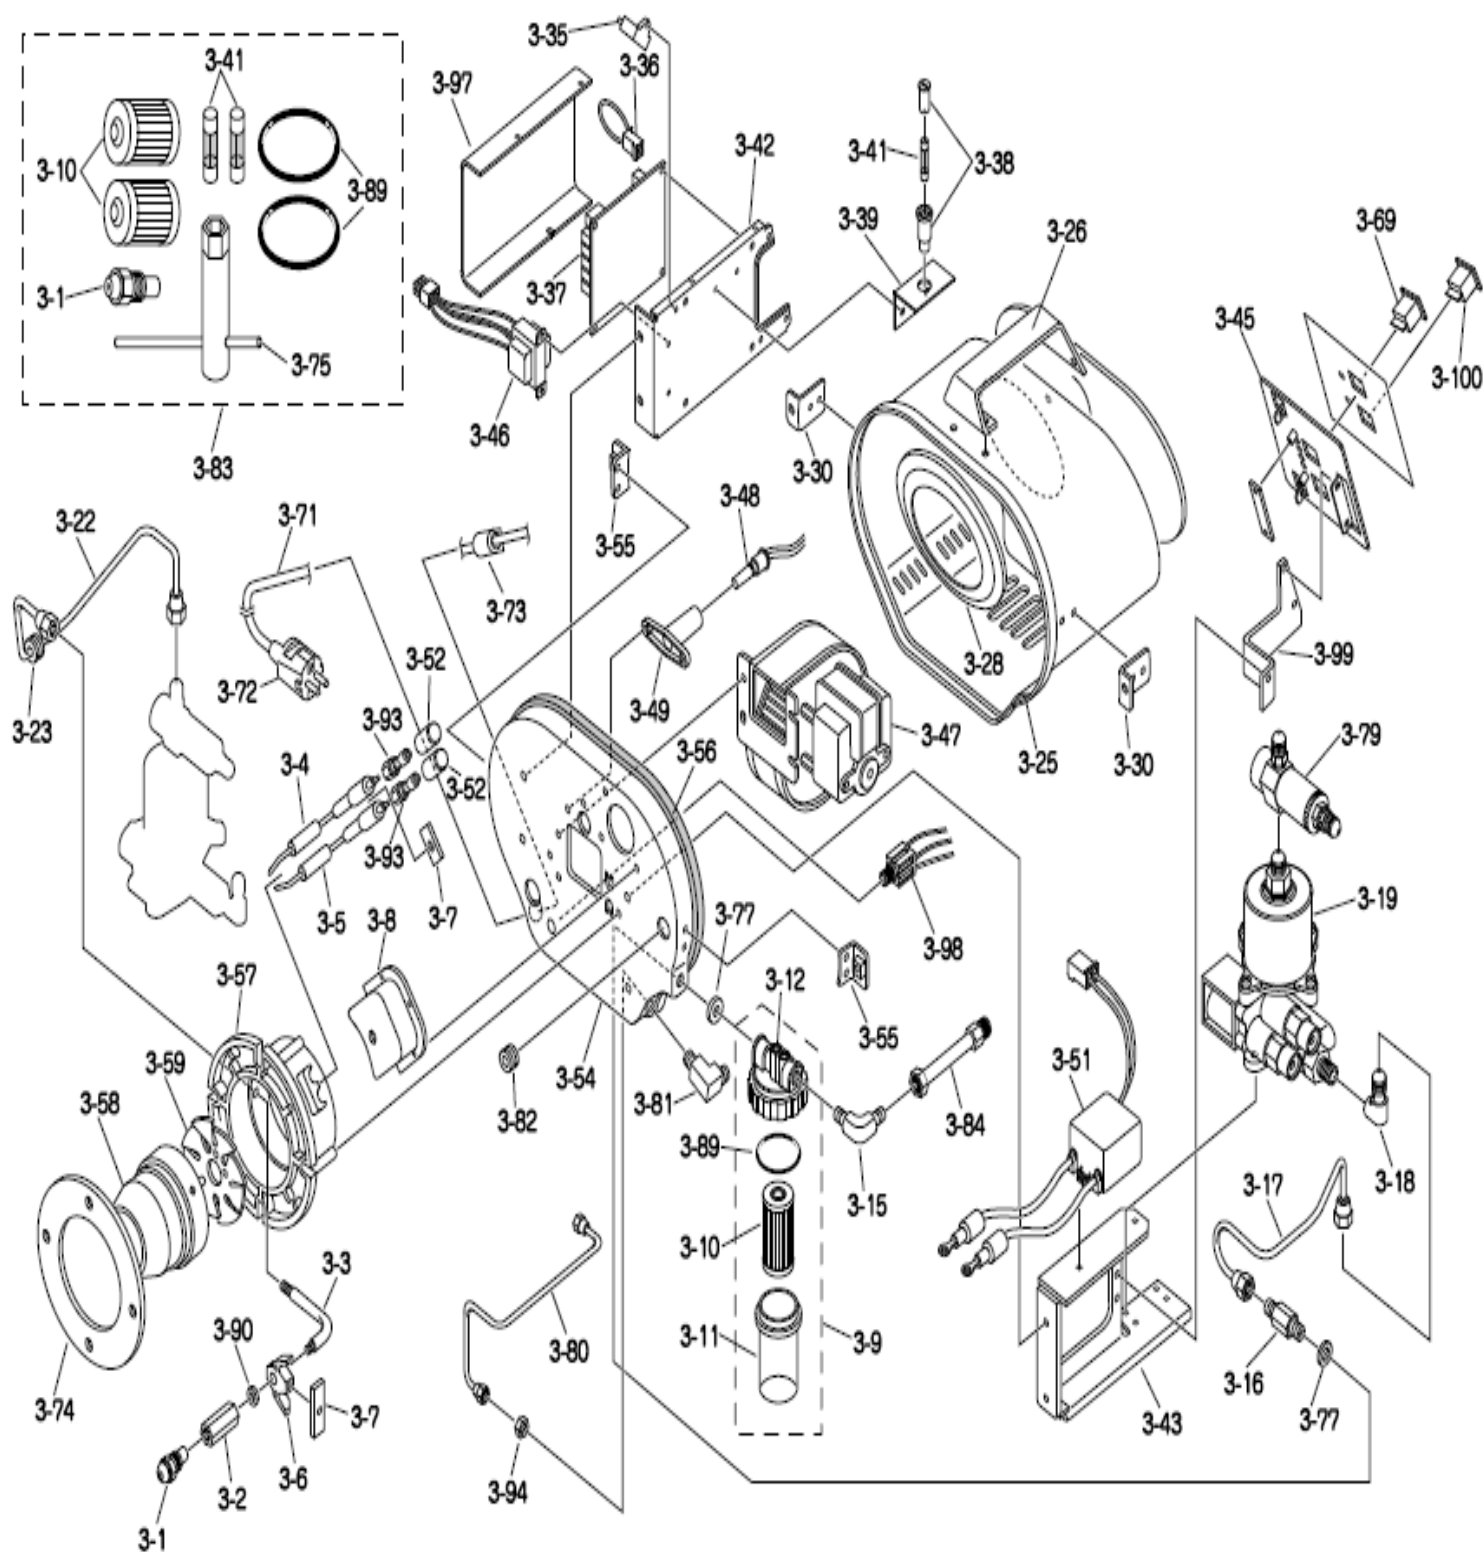VAL KB

Pos. no.	Part name	Number	Q`TY	1-st	2-st	KB	remarks
3-1	Nozzle 1G	44.115.614	1	•		•	
3-1	Nozzle 0,85G	44.115.615	1		•		
3-2	Nozzle holder	44.115.622	1	•	•	•	
3-3	Nozzle pipe	44.115.662	1	•	•	•	
3-4	Electrode (rh)	44.115.218	1	•	•	•	Include 3-93
3-5	Electrode (lh)	44.115.200	1	•	•	•	Include 3-93
3-6	Electrode stay	44.115.648	1	•	•	•	
3-7	Electrode fitting plate	44.115.655	2	•	•	•	
3-8	Electrode cover		1	•	•	•	
3-9	Fuel filter comp.long	44.115.226	1	•	•	•	Old model
3-9	Fuel filter comp. short			•	•	•	
3-10	Filter element long	44.115.235	1	•	•	•	Old model
3-10	Filter element short	44.115.234	1	•	•	•	
3-11	Filter bowl long	44.115.672	1	•	•	•	Old model
3-11	Filter bowl short	44.115.671	1	•	•	•	
3-12	Filter body		1	•	•	•	
3-15	Elbow nipple	44.115.242	1	•	•	•	
3-16	Filter nipple	44.115.259	1	•	•	•	
3-17	Fuel intake line	44.116.613	1	•	•	•	
3-18	Pump elbow	44.115.267	1	•		•	
3-18	Pump elbow	44.115.268	1	•		•	
3-19	Fuel pump	44.115.257	1	•		•	From 2005
3-19	Fuel pump	44.116.700	1		•		From 2005
3-22	Fuel outlet line	44.115.309	1	•	•	•	
3-23	Pump nozzle grommet	44.115.713	1	•	•	•	
3-25	Housing	44.115.739	1	•	•	•	Incl.3-26/28/30
3-26	Housing grip	44.115.747	1	•	•	•	
3-28	Gasket house	44.115.762	1	•	•	•	
3-30	Housing fitting piece	44.115.788	2	•	•	•	
3-35	Condenser	44.118.049	1	•	•	•	Till 2005/2006
3-37	Burner control	44.115.317	1	•		•	From 2006/2007
3-38	Fuse holder	O/R	1	•	•	•	
3-39	Fuse holder bracket	O/R	1	•	•	•	
3-41	Fuse 3 amp.	44.115.887	1	•	•	•	
3-42	Control chassis	O/R	1	•	•	•	
3-43	Pump /tranf. bracket	O/R	1	•	•	•	
3-44	Chassis grummet	44.115.911	1	•	•	•	Diam. 19
3-46	Step down transformer	?	1	•	•	•	
3-47	Fan motor	44.115.325	1	•		•	
3-47	Fan motor	44.116.612	1		•		
3-48	Foto cell	44.115.333	1				
3-49	Foto cell holder	O/R	1	•	•	•	
3-50	Foto cell bracket	O/R	1	•	•	•	
3-51	Ignition transformer	44.116.615	1	•	•	•	From 2006/2007
3-51	Ignition transformer	44.115.960	1	•	•	•	Old model

[illegible]


BURNER VAL 6 MIDI

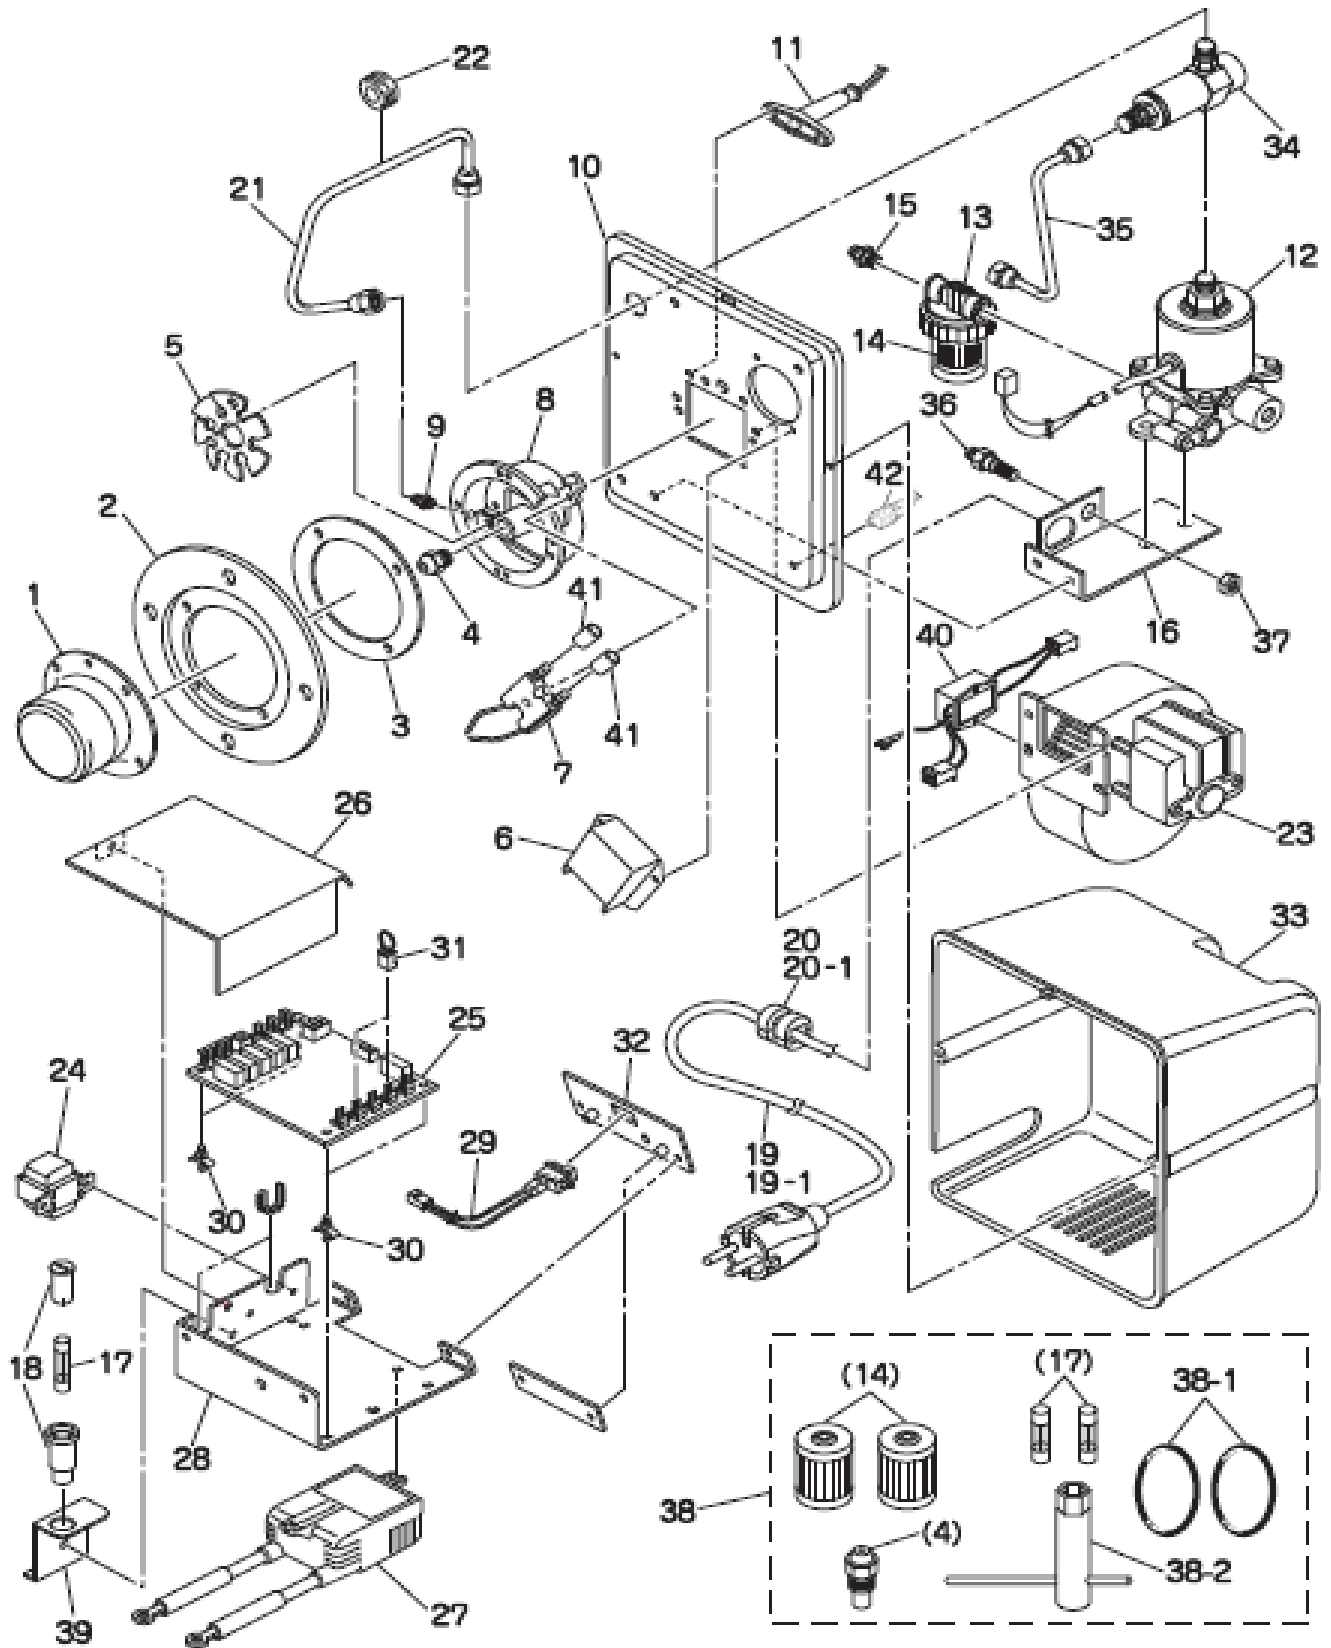

THERMOBILE®

Pos. no.	Part name	Number	Q`TY	remarks
2-1	Burner cone	44.118.025	1	
2-2	Burner flange	44.118.008	1	
2-3	Diffuser packing	44.118.026	1	
2-4	Nozzle	44.115.616	1	0,85 G 60°
2-5	Whirl vane	44.118.027	1	
2-6	Electrode cover	44.118.028	1	Include 3-93
2-7	Electrode	44.118.028	1	From /2005/2006
2-8	Diffuser	44.118.030	1	
2-9	Nozzle nipple	O/R	1	
2-10	Burner base	44.118.031	1	
2-11	Flame monitor complete	44.118.032	1	
2-12	Fuel pump	44.118.033	1	
2-13	Fuel filter complete (long)	44.115.226	1	Old model
2-14	Filter element long	44.115.235	1	Old model
2-14A	Filter element short	44.115.234	1	
2-14B	Filter bowl long	44.115.672	1	Old model
2-14C	Filter bowl short	44.115.671	1	
2-15	Filter nipple	44.115.259	1	
2-16	Pump bracket	O/R	1	
2-17	Fuse	44.115.887	1	
2-18	Fuse holder	O/R	1	
2-19	Cable with plug	40.707.136	1	
2-20	Cable stopper	O/R	1	
2-21	Fuel outlet line	44.118.037	1	
2-22	Pump nozzle grommet	O/R	1	
2-23	Fan motor	44.118.038	1	
2-24	Step down transformer	44.115.960	1	
2-25	Burner control	44.115.317	1	From 2006/2007
2-26	Burner control cover	44.118.039	1	
2-27	Ignition transformer	44.118.040	1	
2-28	Control chassis	44.118.041	1	
2-29	Switch assembly	44.115.762	1	
2-30	Control support	44.118.043	1	
2-31	Short circuit cord	O/R	1	From 2007 not needed
2-32	Face plate	44.118.044	1	With label from 2008
2-33	Burner cover	44.118.045	1	
2-34	Air vent valve	44.116.166	1	
2-35	Return line	44.118.046	1	
2-36	Return line nipple	O/R	1	
2-37	Nipple fitting nut	O/R	1	
2-38	Repair set	44.116.141	1	
2-38A	O-ring	44.116.141	1	
2-39	Fuse holder bracket	44.118.048	1	
2-40	Noise filter	44.118.049	1	
2-41	Isolation cap	O/R	2	
2-42	Jack	O/R	1	

TANK VAL 6 DAYSTAR

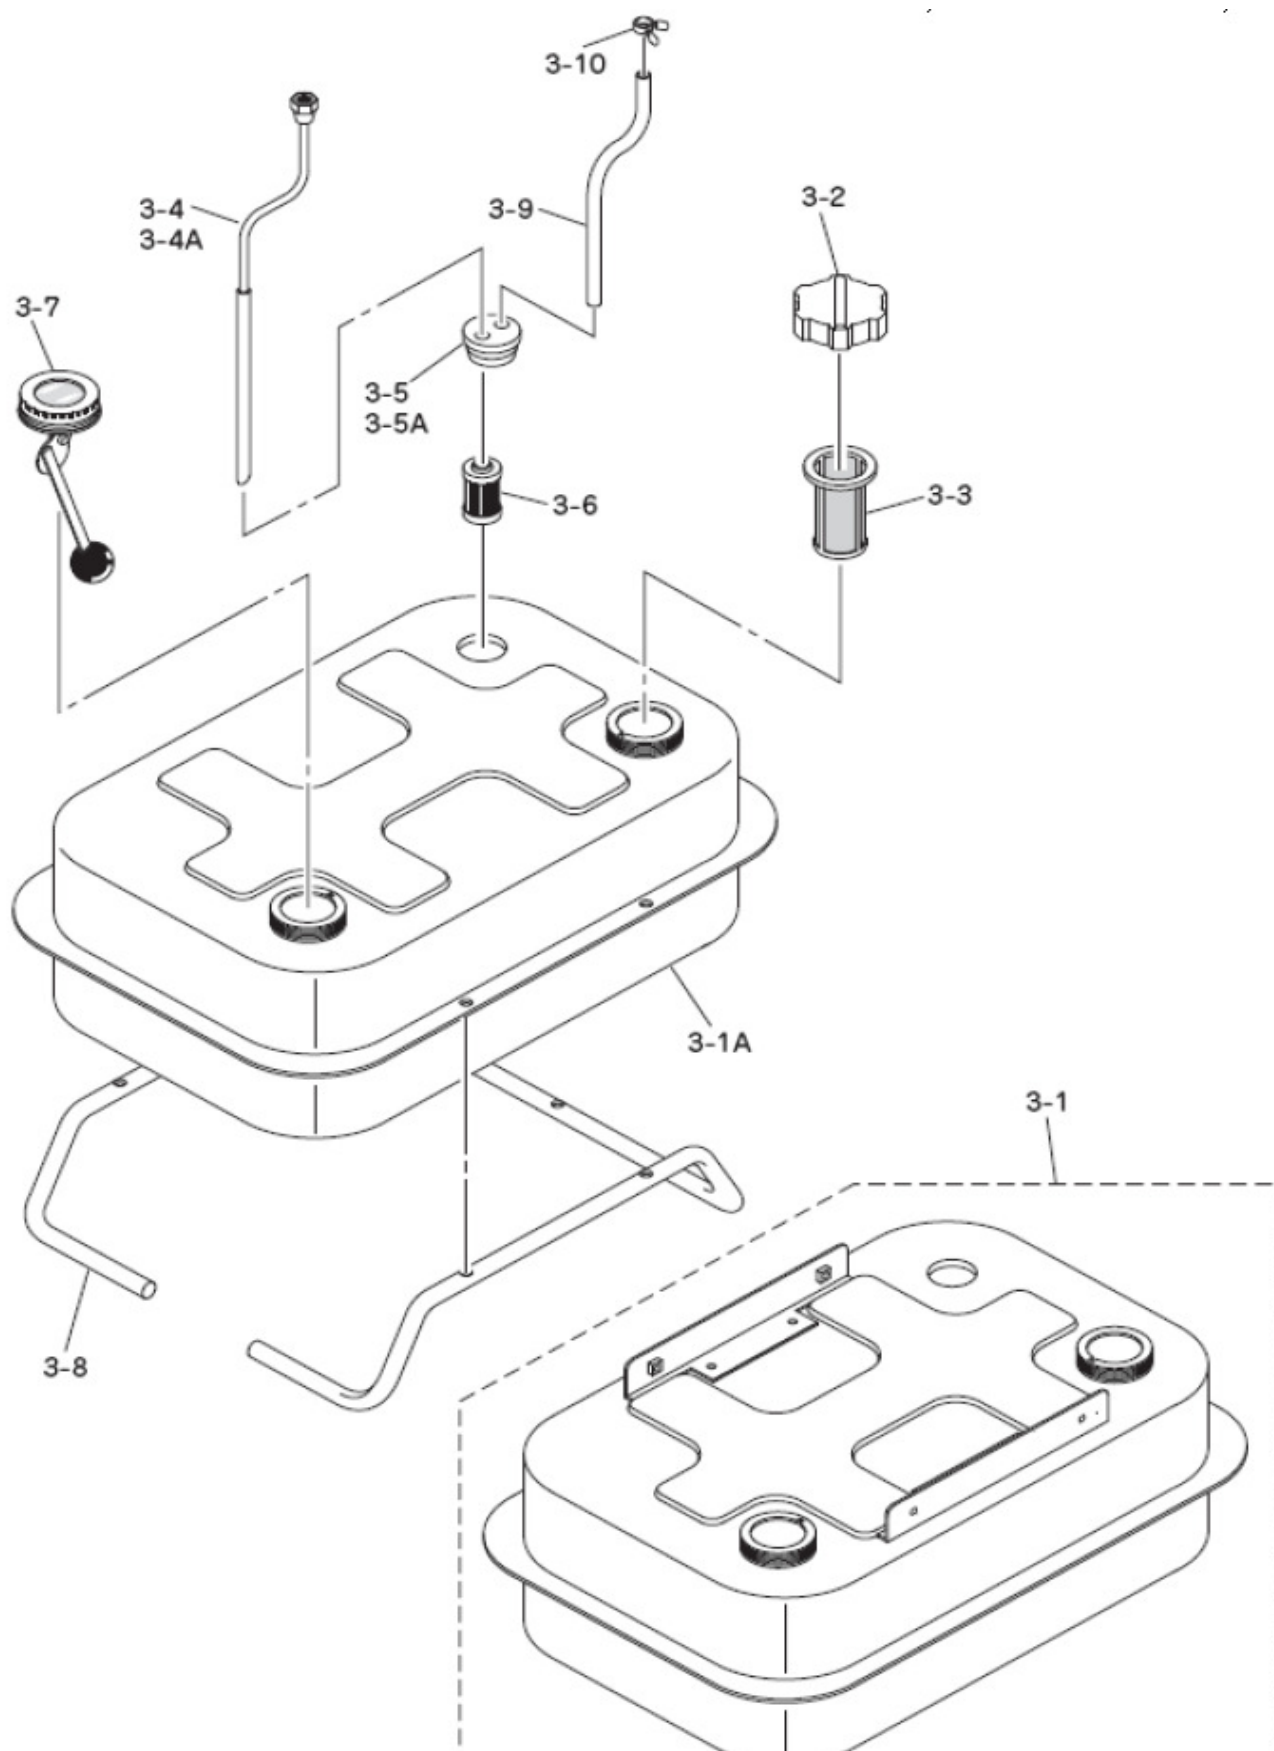


TANK VAL 6 DAYSTAR

Pos.no.	Part name	Part number	Qty	Remarks
3-1	Fuel tank	50317 103007	1	10 liter, from 2005
3-2	Tank cap	50317 103003	1	
3-3	Tank inlet filter	50263 203028	1	Till 2008
3-4	Suction pipe assembly	50317 103011	1	From 2006
3-5	Float switch sael	50238 203003	1	Till 2005
3-5A	Suction return packing	40317 203013	1	From 2006
3-6	Filter element	44.116.625	1	15u
3-7	Fuel gauge	50317	1	
3-8	Stand	50317 203007	1	
3-9	Return line	50317 203014	1	
3-10	Hose clamp	50317 202016	1	

Combustion unit Daystar

Pos.no.	Part name	Part number	Qty	Remarks
1-1	Protector assembly	50317 101004	1	
1-2	Drum front ring	50319 201002	1	
1-3	Radiation disc	50317 201002	1	
1-4	Inner cylinder	50317 201004	1	Till 2009
1-4A	Inner cylinder	50317 201012	1	From 2010
1-5	Outer cylinder	50317 101003	1	
1-6	Cylinder end	50310 201012	1	
1-7	Drum	50317 201003	1	From 2006
1-8	Insulator	50310 201008	1	Till 2009
1-8A	Insulator	50317 201011	1	From 2009
1-9	Drum end	50317 201003	1	
1-10	Grip	50310 201022	1	
1-11	Burner cone gasket	50310 201021	1	Till 2005
1-11A	Burner draft gasket	50317 201009	1	From 2006 to 2009
1-11B	Combustion chamber gasket	50317 201013	1	From 2006 to 2009
1-12	Overheat sensor	50229 202061	1	
1-13	Overheat sensor cable	50310 201024	1	
1-14	Cable clip	50310 201025	1	
1-15	Fan	50310 201020	1	
1-16	Fan motor	50317 201010	1	From 2009
1-17	Relay cable	50317 203019	1	From 2009
1-18	Drum base	50317 103009	1	Till 2009
1-18A	Drum base	50317 103012	1	From 2009
1-19	Motor cord bushing	50320 202018	1	From 2009

DAYSTAR / COMBUSTION UNIT PH1/PH5

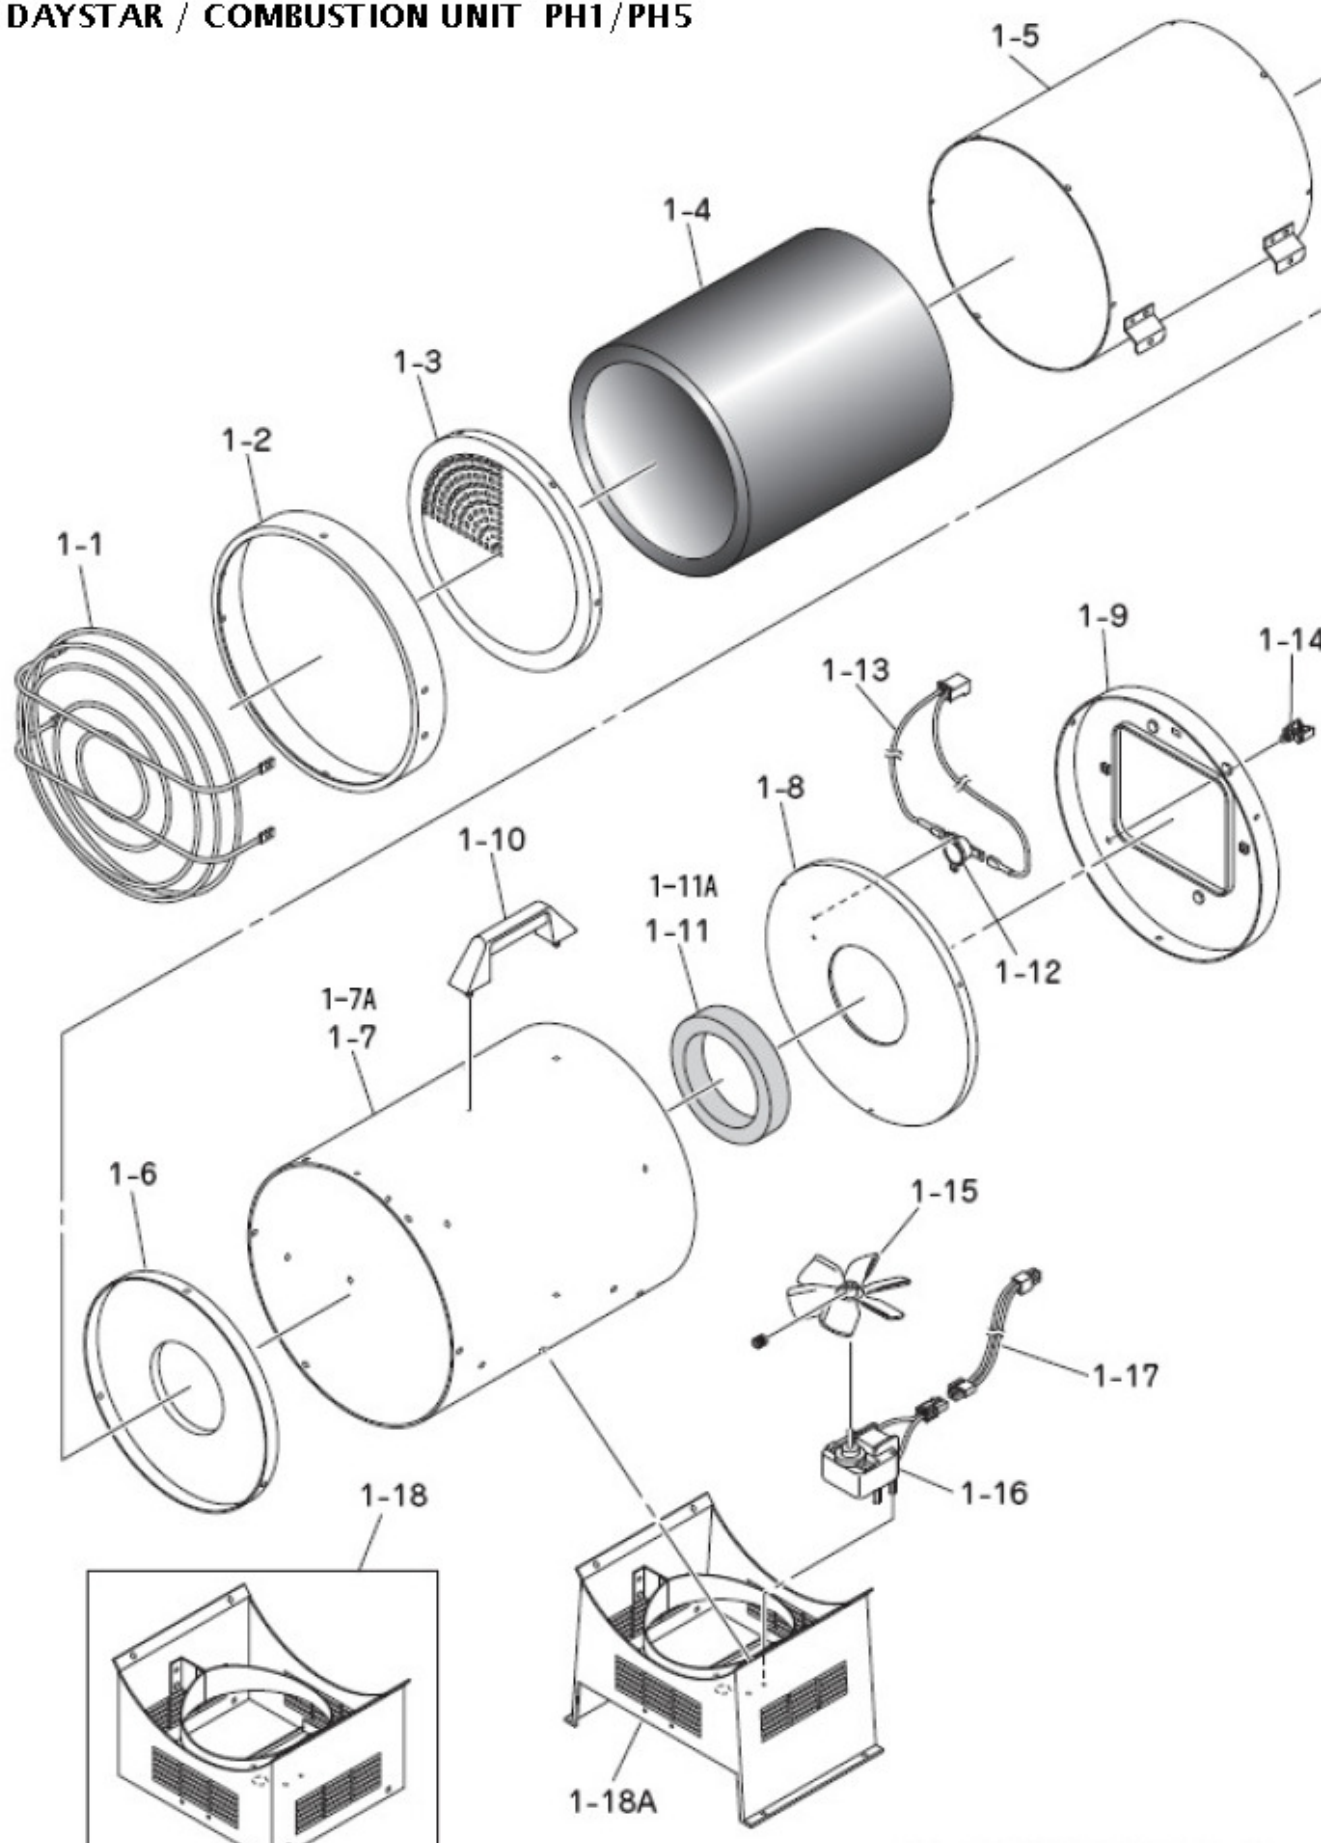


PH1 110V/230V Burner 2008.10

Burner unit Daystar

Pos.no.	Part name	Part number	Qty	Remarks
2-1	Burner base	50319 102005	1	From 2006
2-2	Free grommet	50263 202010	1	
2-3	Diffuser	50262 202001	1	
2-4	Pump nipple	50204 201025	2	From 2006
2-5	Nozzle	50317 202010	1	Till 2005
2-5A	Nozzle	50319 202013	1	From 2006
2-6	Whirl vane	50319 202024	1	Till 2009
2-6A	Whirl vane	50319 202027	1	From 2009
2-7	Electrode	50319 202017	1	From 2006
2-8	Burner cone bracket	50310 202004	1	Till 2009
2-9A	Burner cone	50319 102006	1	Till 2009
2-9B	Burner cone	50319 202026	1	From 2009
2-10A	Burner draft gasket	50319202025	2	Till 2009
2-10B	Burner gasket	50319 202028	2	From 2009
2-12	Switch assembly	50319 102009	1	From 2009
2-13	Tip-over switch	50298 202015	1	
2-14	Tip-over switch cable	50310 202017	1	
2-15	Transformer	50291 201003		
2-16A	Foto cell	50262 102008	1	Till 2006 with 2-33 holder
2-16B	Foto cell	50306 101003	1	From 2006
2-17	Burner control	50319 202008	1	From 2005
2-18	Midget fuse (1,6A)	50291 201006	1	From 2005
2-19	Control support	50229 201037	4	
2-20	Fan motor	50319 202004	1	
2-21	Ignition device	50319 202002	1	From 2006
2-22	Power cable	50319 2A2002	1	From 2006 with 2-23
2-23	Cable stopper	50205 201017	1	From 2006
2-24	Fuel pump	50319 202012	1	From 2006 with 2-31
2-25	Fuel outlet line	50319 202014	1	From 2006
2-26	housing	50319 102002	1	
2-28	Insulating cap	50291 201016	2	
2-29	Return line	50319 202015	1	From 2006
2-30	Pump elbow	21300 503-55	1	From 2006
2-31	Air vent valve	21062 003-67	1	From 2006
2-32	Thermostat connector	50306 201007	1	From 2006
2-33	Foto cell holder	50262 202079	1	


TANK SECTION EPX

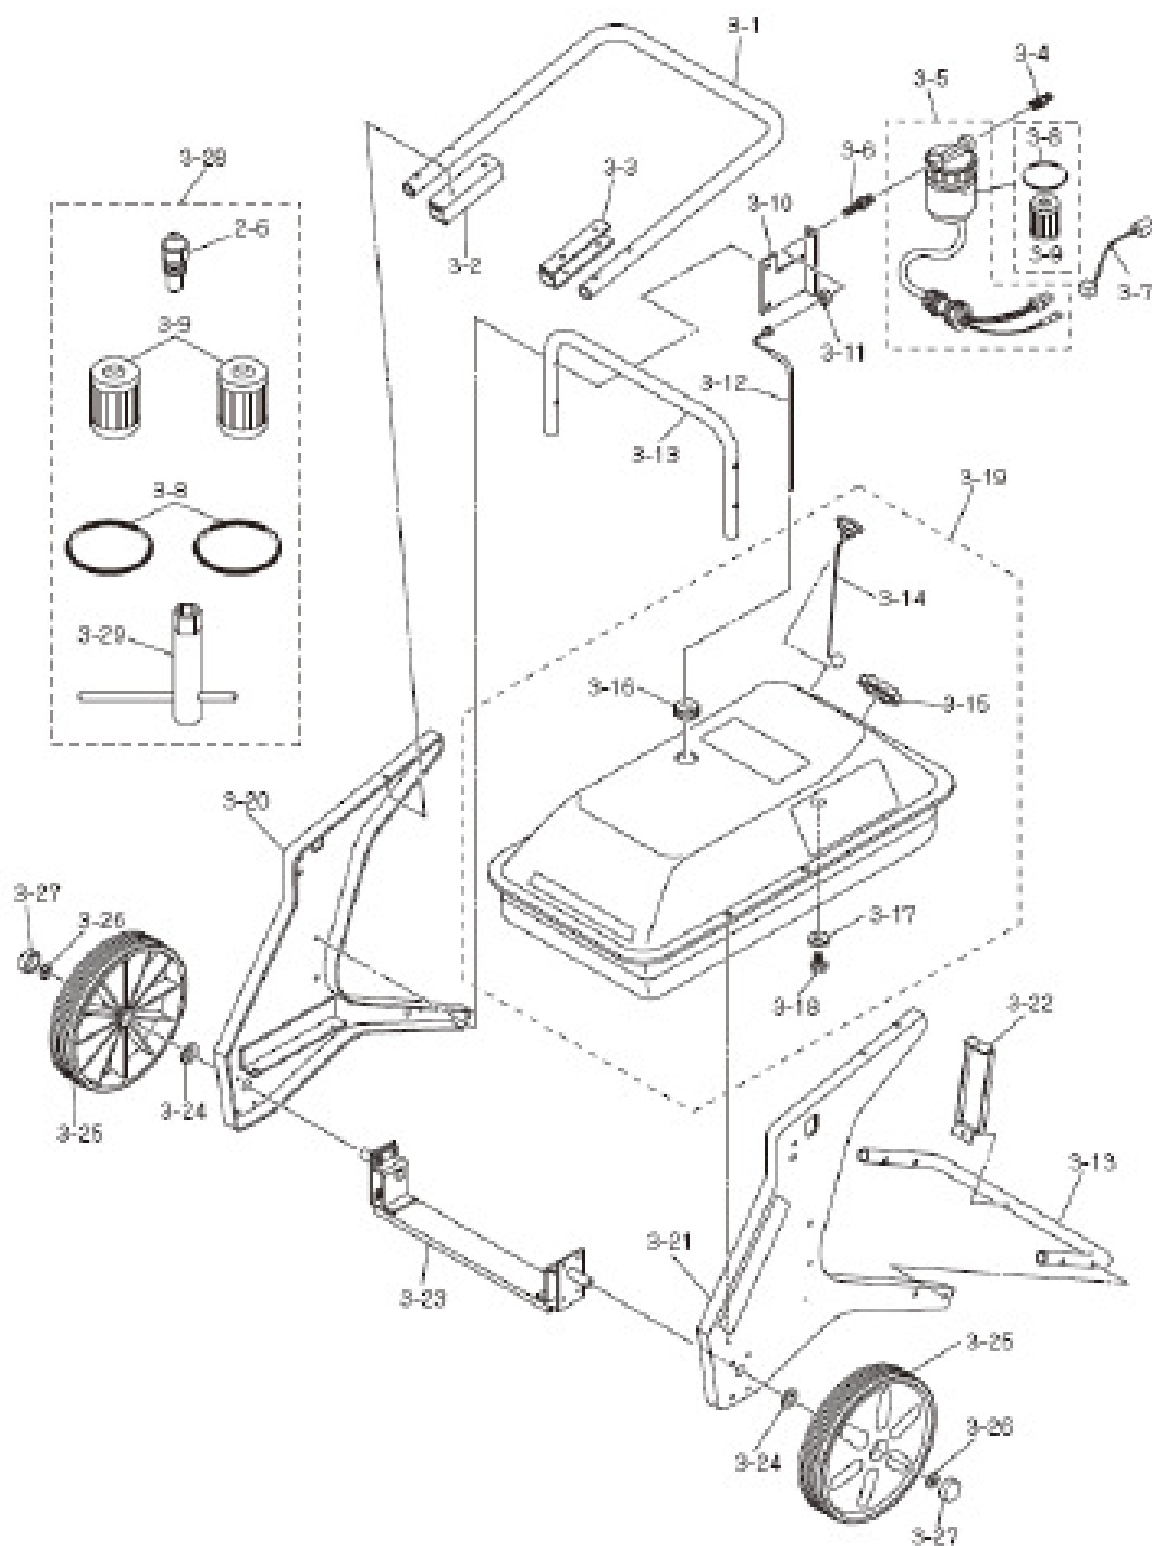

TANK SECTION EPX

PART NO.	PART NAME <COMBUSTION SECTION>	CODE NO.	Q'TY/ SET	EPX1	REMARKS
3-1	HANDLE	50335 202012	1	•	
3-2	HANDLE STAY BRACKET(L)	50335 202019	1	•	
3-3	HANDLE STAY BRACKET(R)	50335 202020	1	•	
3-4	FILTER HOSE NIPPLE	220310 01-43	1	•	
3-5	STRAINER HEATER	50335 102007	1	•	
		50337 102002	1		
3-6	FILTER NIPPLE	50306 201010	1	•	
3-7	STRAINER HEATER RELAY CABLE	50335 201030	1	•	till G-02
		50335 201046		•	from G-03
		50337 201006	1		till G-01
		50337 201009			
3-8	O RING	21021 003-13	1	•	
3-9	FILTER ELEMENT	21021 003-10	1	•	
3-10	FILTER FITTING BRACKET	50335 202014	1	•	
3-11	NIPPLE FITTING NUT	21300 503-58	1	•	same as 2-19
3-12	SUCTION PIPE ASSEMBLY	50335 102011	1	•	
3-13	SUPPORT PIPE	50335 202013	2	•	
3-14	FUEL GAUGE	50335 202021	1	•	
3-15	TANK CAP	50335 102008	1	•	
3-16	SUCTION RETURN PACKING	50317 203013	1	•	
3-17	DRAIN PACKING	50231 204021	1	•	
3-18	DRAIN BOLT	50231 204020	1	•	
3-19	FUEL TANK ASSEMBLY	50335 102002	1	•	with 50335-202026 caution
		50337 102003			with 50337-202002 caution
3-20	SIDE PANEL(L)	50335 102012	1	•	
3-21	SIDE PANEL(R)	50335 102013	1	•	
3-22	TANK SUPPORT BRACKET	50335 202011	1	•	
3-23	WHEEL BEARING ASSEMBLY	50335 102006	1	•	
3-24	WHEEL SPACER	50335 202028	2	•	
3-25	WHEEL	50335 202007	2	•	
3-26	WHEEL WASHER	50335 202022	2	•	
3-27	SHAFT CAP	50335 202010	2	•	
3-28	REPAIR SET	50335 150002	1	•	
3-29	NOZZLE WRENCH	21022 003-68	1	•	
option	SHIELDING MAT(1 0pcs pack)	50300 205001			


COMBUSTION SECTION EPX

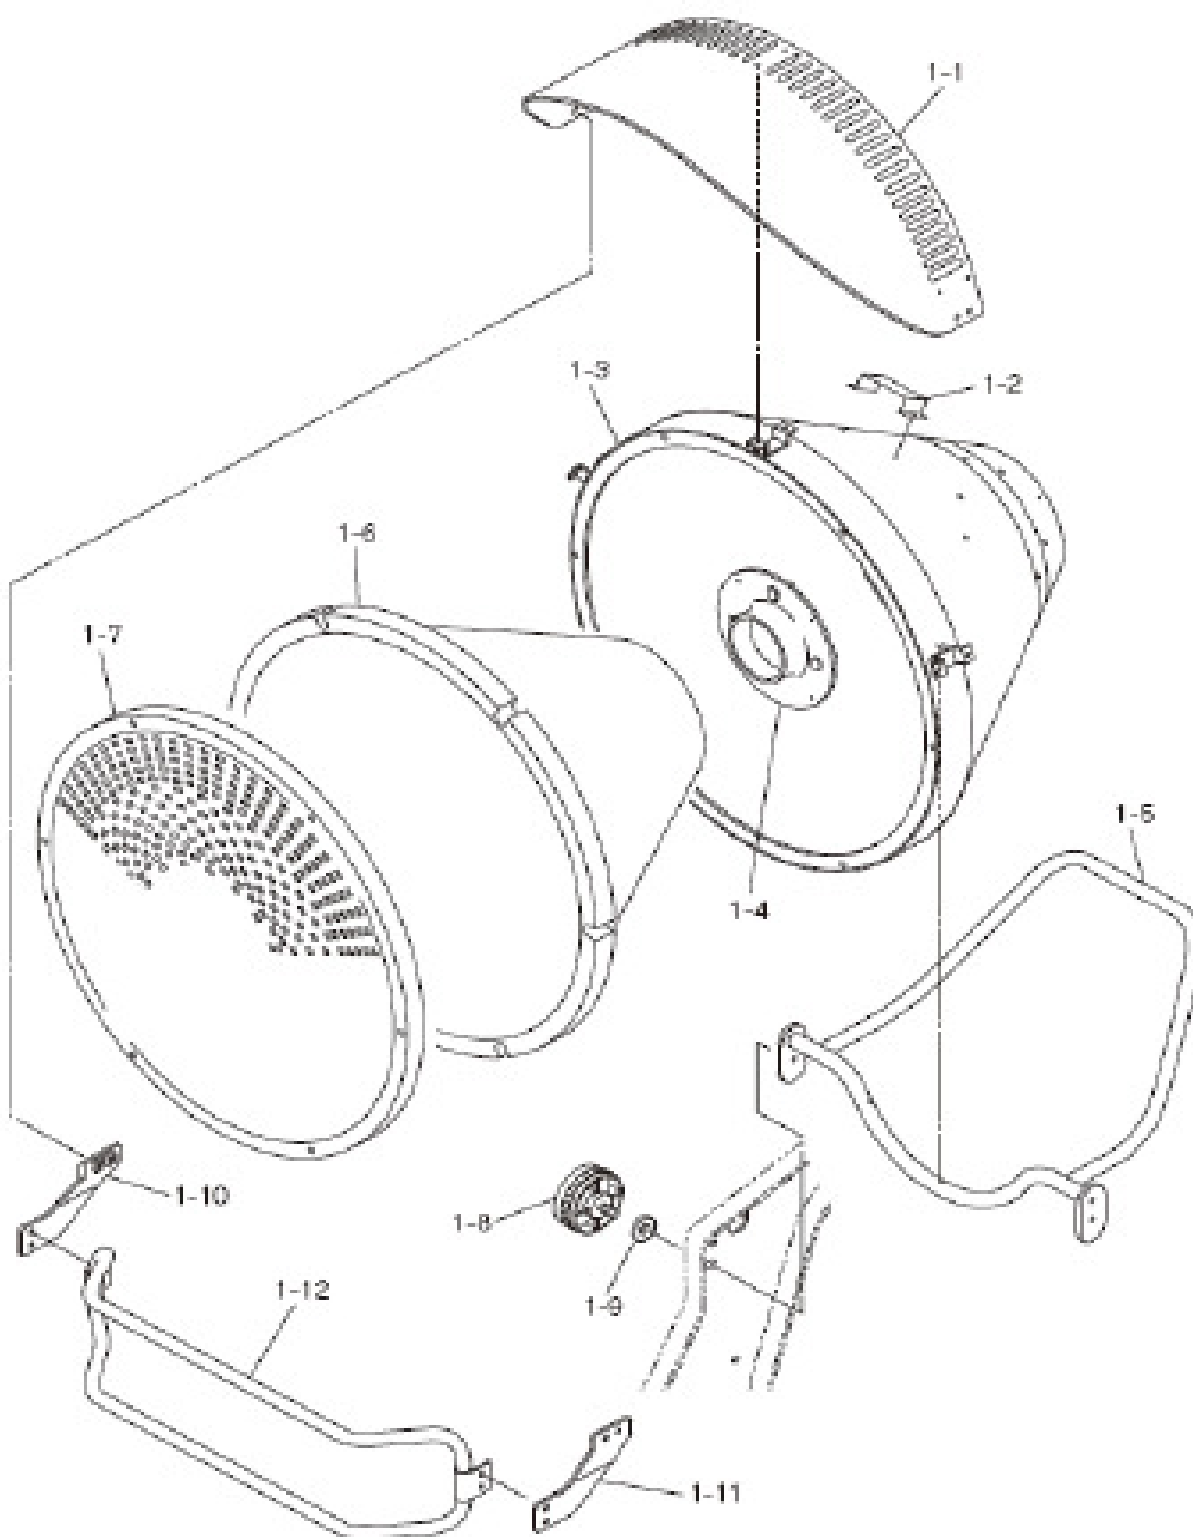

COMBUSTION SECTION EPX

PART NO.	PART NAME <COMBUSTION SECTION>	CODE NO.	Q'TY/ SET	EPX1	EPX5	REMARKS
1-1	VISOR	50335 203003	1	•	•	
1-2	CAUTION LABEL PLATE	50335 103006	1	•	•	with 50300203002 label
	CONICAL HOUSING	50335 103004	1	N/A	N/A	changed to 50335180001
1-3	CONICAL HOUSING ASSEMBLY	50335 180001	1	•	•	include 1-2
1-4	BURNER FITTING PIECE	50335 203007	1	•	•	
1-5	SUPPORT PIPE	50335 103002	1	•	•	
1-6	CONICAL INSULATOR	50335 203002	1	•	•	
1-7	RADIATION DISK	50335 203001	1	•	•	
1-8	KNOB BOLT	50229 202074	1	•	•	
1-9	GASKET	21300 5002-9	1	•	•	
1-10	PROTECTOR BRACKET(L)	50335 203006	1	•	•	
1-11	PROTECTOR BRACKET(R)	50335 203005	1	•	•	
1-12	PROTECTOR ASSEMBLY	50335 103005	1	•	•	

BURNER SECTION EPX

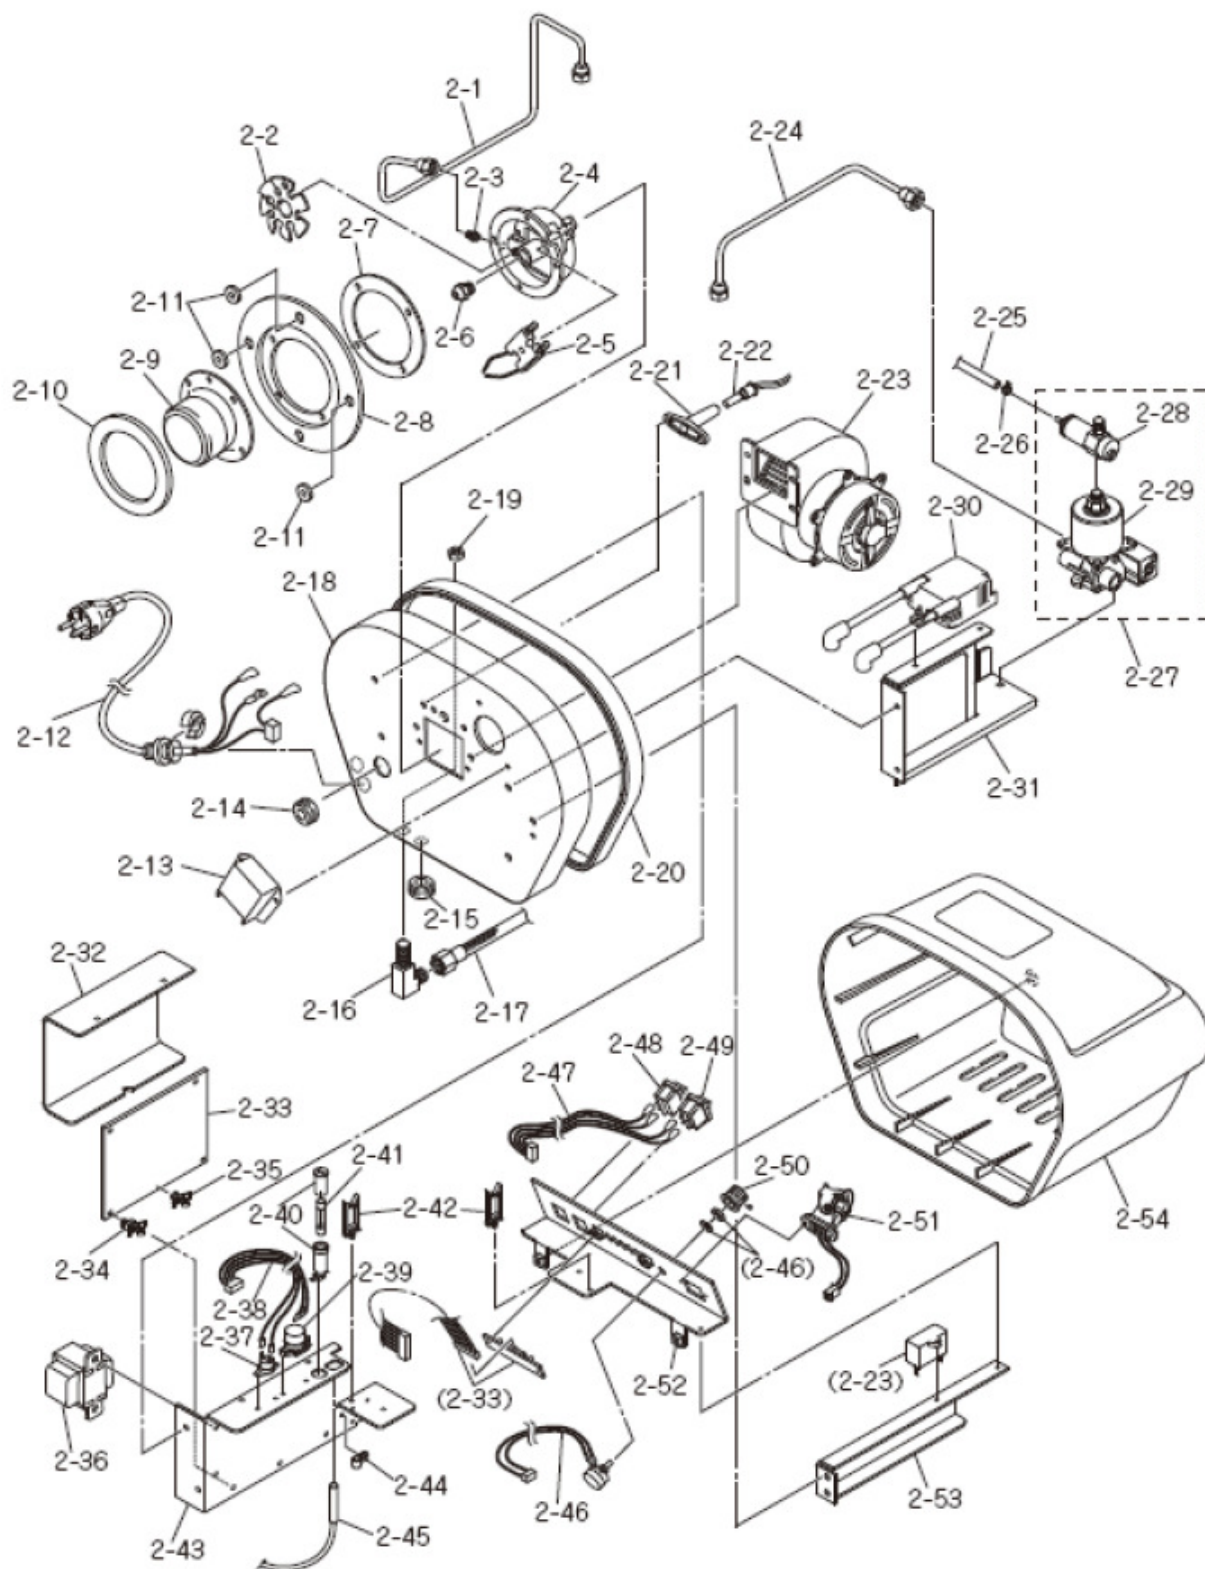

BURNER SECTION EPX


PART NO.	PART NAME <COMBUSTION SECTION>	CODE NO.	Q'TY/ SET	EPX1	EPX5	REMARKS
2-1	FUEL OUTLET LINE	50335 201007	1	•	•	
2-2	WHIRL VANE	50335 201012	1	•	•	
2-3	NOZZLE NIPPLE	50217 202052	1	•	•	
2-4	DIFFUSER	50284 202007	1	•	•	
2-5	ELECTRODE	50303 201010	1	•	•	
2-6	NOZZLE	50300 201018	1		•	0.85G/60°H for H lot only
		50335 201038	1	•	•	0.75G/60°H
2-7	DIFFUSER PACKING	50298 201020	1	•	•	
2-8	BURNER FLANGE	50300 201008	1	•	•	
2-9	BURNER CONE	50300 201017	1	•	•	
2-10	BURNER PACKING	50335 201036	1	•	•	
2-11	SPACER RING	50335 201037	3	•	•	
2-12	POWER CABLE	50335 201021	1	•		
		50337 201002	1		•	
2-13	ELECTRODE COVER	50298 201008	1	•	•	
2-14	PUMP NOZZLE GROMMET	21022 003-25	1	•	•	
2-15	φ16 GROMMET	50335 201029	1	•	•	
2-16	RETURN LINE NIPPLE	21300 503-60	1	•	•	
2-17	FUEL HOSE	50220 203003	1	•	•	L=450
2-18	BURNER BASE	50335 201001	1	•	•	
2-19	NIPPLE FITTING NUT	21300 503-58	1	•	•	same as 3-11
2-20	BASE PACKING	50335 201018	1	•	•	
2-21	FLAME MONITOR HOLDER	50262 202029	1	•	•	
2-22	FLAME MONITOR COMPLETE	50335 101009	1	•	•	
2-23	FAN MOTOR	50335 201015	1	•		
		50337 201004	1		•	
2-24	FUEL INTAKE LINE	50335 201006	1	•	•	
2-25	RETURN HOSE	50335 201008	1	•	•	
2-26	HOSE CLAMP	50319 202016	1	•	•	
2-27	FUEL PUMP WITH AIR VENT VALVE	50335 201040	1	•		
		50337 201003	1		•	for H lot only
		50337 201007	1		•	
2-28	AIR VENT VALVE	50335 201041	1	•		
2-29	FUEL PUMP WITHOUT AIR VENT VALVE	50335 201042	1	•		
2-30	IGNITION TRANSFORMER	50335 201016	1	•		
		50298 201006	1		•	
2-31	PUMP TRANSFORMER BRACKET	50335 201002	1	•	•	
2-32	BURNER CONTROL COVER	50335 101010	1	•		label:50335201017+50291201019
		50337 101005	1		•	label:50335201017+50300201028
2-33	BURNER CONTROL BOARD	50337 170001	1		•	for H lot only (7min.)
		50335 201039	1	•	•	
2-34	CONTROL BOARD SUPPORT	50229 201037	4	•	•	
2-35	CONTROL BOARD SPACER	50271 202023	2	•	•	

BURNER SECTION EPX


PART NO.	PART NAME <COMBUSTION SECTION>	CODE NO.	Q'TY/ SET	EPX1	EPX5	REMARKS
2-36	STEP DOWN TRANSFORMER	50335 201033	1	•		
		50300 201005	1		•	
2-37	OVERHEAT SENSOR	50288 202001	1	•	•	
2-38	OVERHEAT SENSOR CABLE	50335 201028	1	•	•	
2-39	TIP-OVER SWITCH	50298 202015	1	•	•	
2-40	FUSE HOLDER	50291 201004	1	•		
		50300 201024	1		•	
2-41	FUSE	50291 201006	1	•		
		50300 201026	1		•	
2-42	WIRE BINDING	50810 201055	2	•	•	
2-43	CONTROL BOARD CHASSIS	50335 201003	1	•	•	
2-44	NYLON CLAMP	50304 202022	1	•	•	
2-45	TEMPERATURE SENSOR	50304 202021	1	•	•	
2-46	INTERNAL THERMOSTAT CABLE	50335 101007	1	•	•	
2-47	OPERATION SWITCH CABLE	50335 201026	1	•	•	
2-48	CHANGE-OVER SWITCH	50288 204014	1	•	•	till H-02 change to 50335201045
		50335 201045		•	•	from G-01
2-49	OPERATION SWITCH	50288 204013	1	•	•	till H-02 change to 50335201044
		50335 201044		•	•	from G-01
2-50	INTERNAL THERMOSTAT KNOB	50335 201025	1	•	•	
2-51	EXTERNAL THERMOSTAT CONNECTOR	50335 101008	1	•	•	
2-52	OPERATING PANEL	50335 101011	1	•	•	
2-53	OPERATING BRACKET□	50335 201010	1	•	•	
2-54	BURNER COVER	50335 101002	1	•	•	

IFT 42

COMBUSTION CHAMBER ASSEMBLY

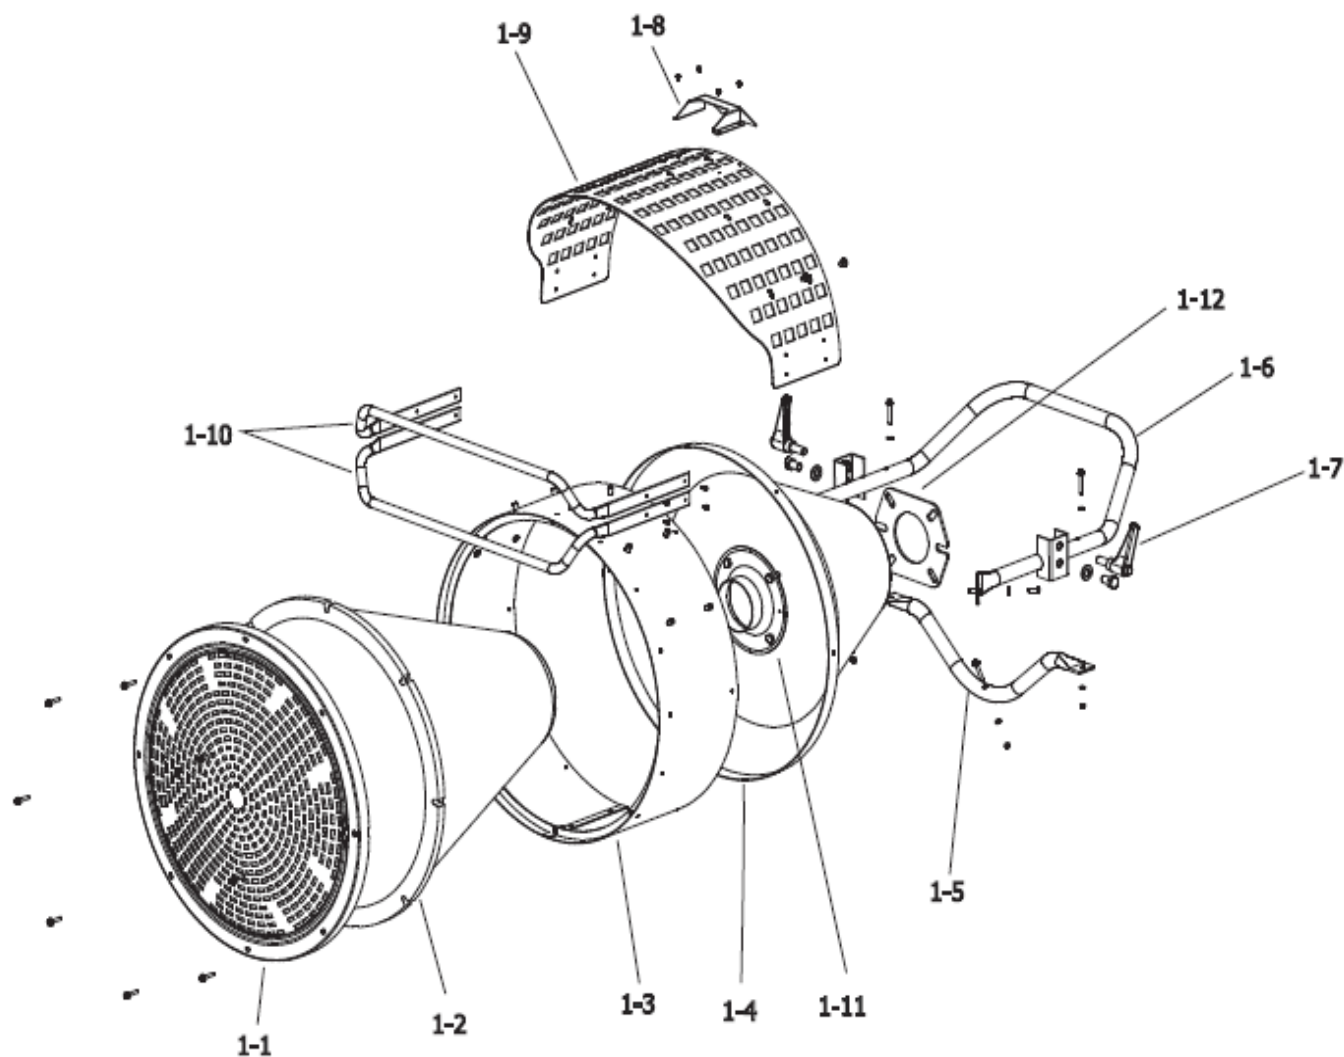

IFT 42

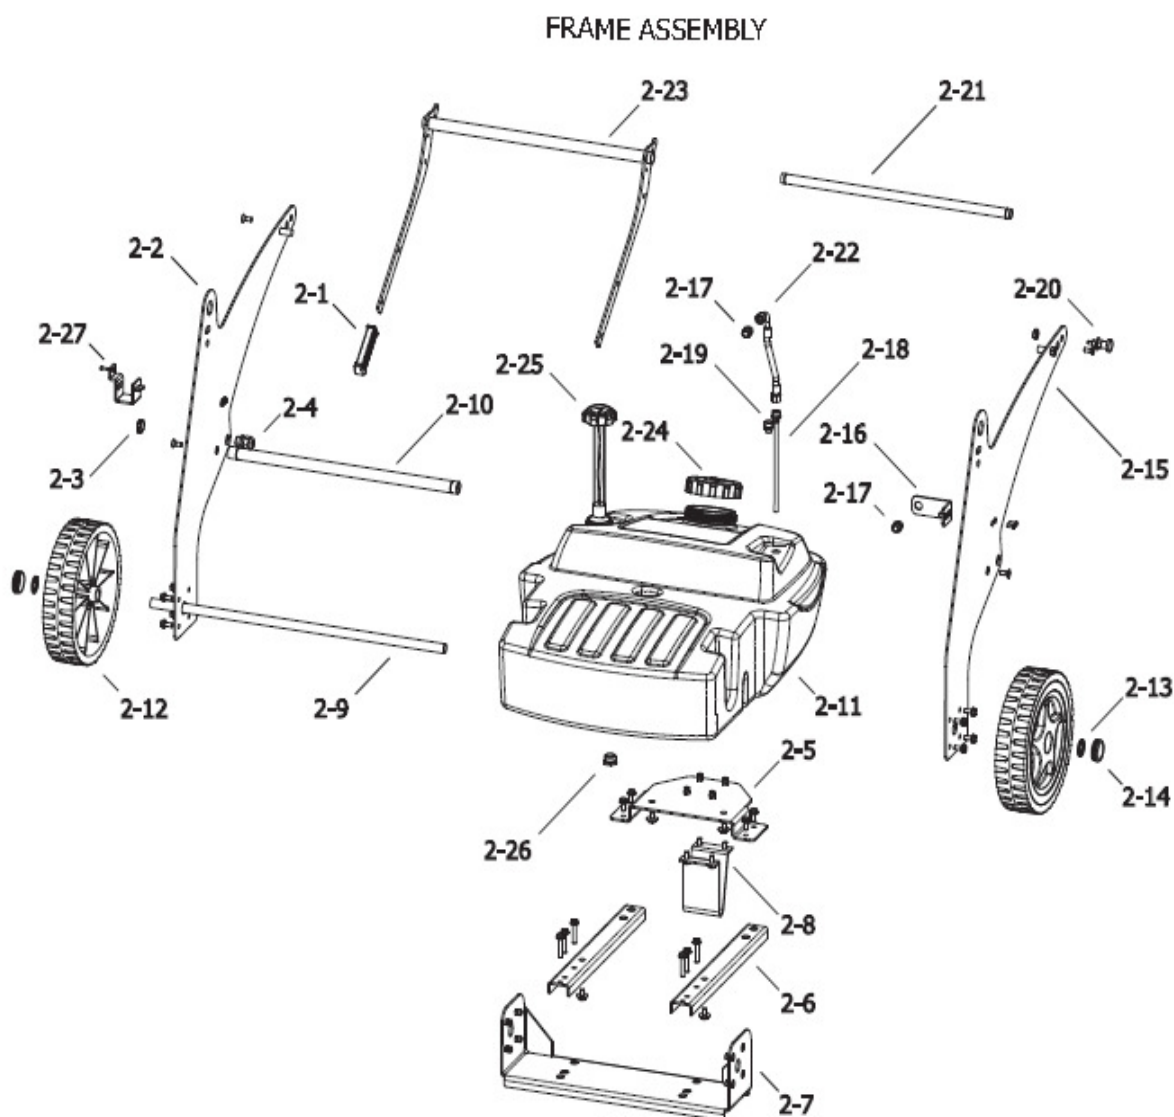

IFT 42

UNIT 3

PARTS LIST

POS.	Code NR	Description	Rev. Emiss - Aug 2011
1-1	4117.043	RADIATION DISC	
1-2	4117.007	CONICAL INSULATOR	
1-3	4117.072	DRUM	
1-4	4117.104	CONICAL HOUSING	
1-5	4117.055	CONICAL HOUSING BRACKET	
1-6	4117.032	GRIP	
1-7	4117.294	PLASTIC HOLD	
1-8	4117.027	PROTECTION SUPPORT	
1-9	4117.328	VISOR	
1-10	4117.096	GUARD RAIL	
1-11	4117.190	COMBUSTION CHAMBER FLANGE	
1-12	4117.191	COMBUSTION CHAMBER FLANGE GASKET	

UNIT 3


PARTS LIST

POS.	Code NR	Description	Rev. Emiss - Aug 2011
2-1	4117.044	PLASTIC GRIP	
2-2	4117.335	RIGHT SUPPORT	
2-3	4100.656	NYLON LOCKNUT	
2-4	4150.528	STRAIN RELIEF BUSHING	
2-5	4117.202	FUEL TANK BASE KIT	
2-6	4117.203	BURNER FLANGE	
2-7	4117.204	STRINGER KIT	
2-8	4117.019	LOWER SUPPORT KIT	
2-9	4117.038	AXLE	
2-10	4117.036	TUBE	
2-11	4117.304	FUEL TANK	
2-12	4110.978	WHEEL	
2-13	4111.072	WHEEL HOLDER	
2-14	4111.480	WHEEL PLUG	
2-15	4117.336	LEFT SUPPORT	
2-16	4117.042	KIT FILTER SUPPORT	
2-17	4117.048	NIPPLES	
2-18	4117.050	PIPE CONNECTION	
2-19	4117.049	NIPPLES	
2-20	4117.152	SET PLUG	
2-21	4117.039	TUBE	
2-22	4117.051	FLEXIBLE CONNECTION	
2-23	4117.011	ROTATION SET	
2-24	4117.053	FUEL PLUG	
2-25	4117.006	FUEL LEVEL PROBE	
2-26	4032.813	DRAIN PLUG	
2-27	4117.185	SUPPORT	

IFT 42

From Serial Number: 30700044

Rev. Erriss. - Aug 2011

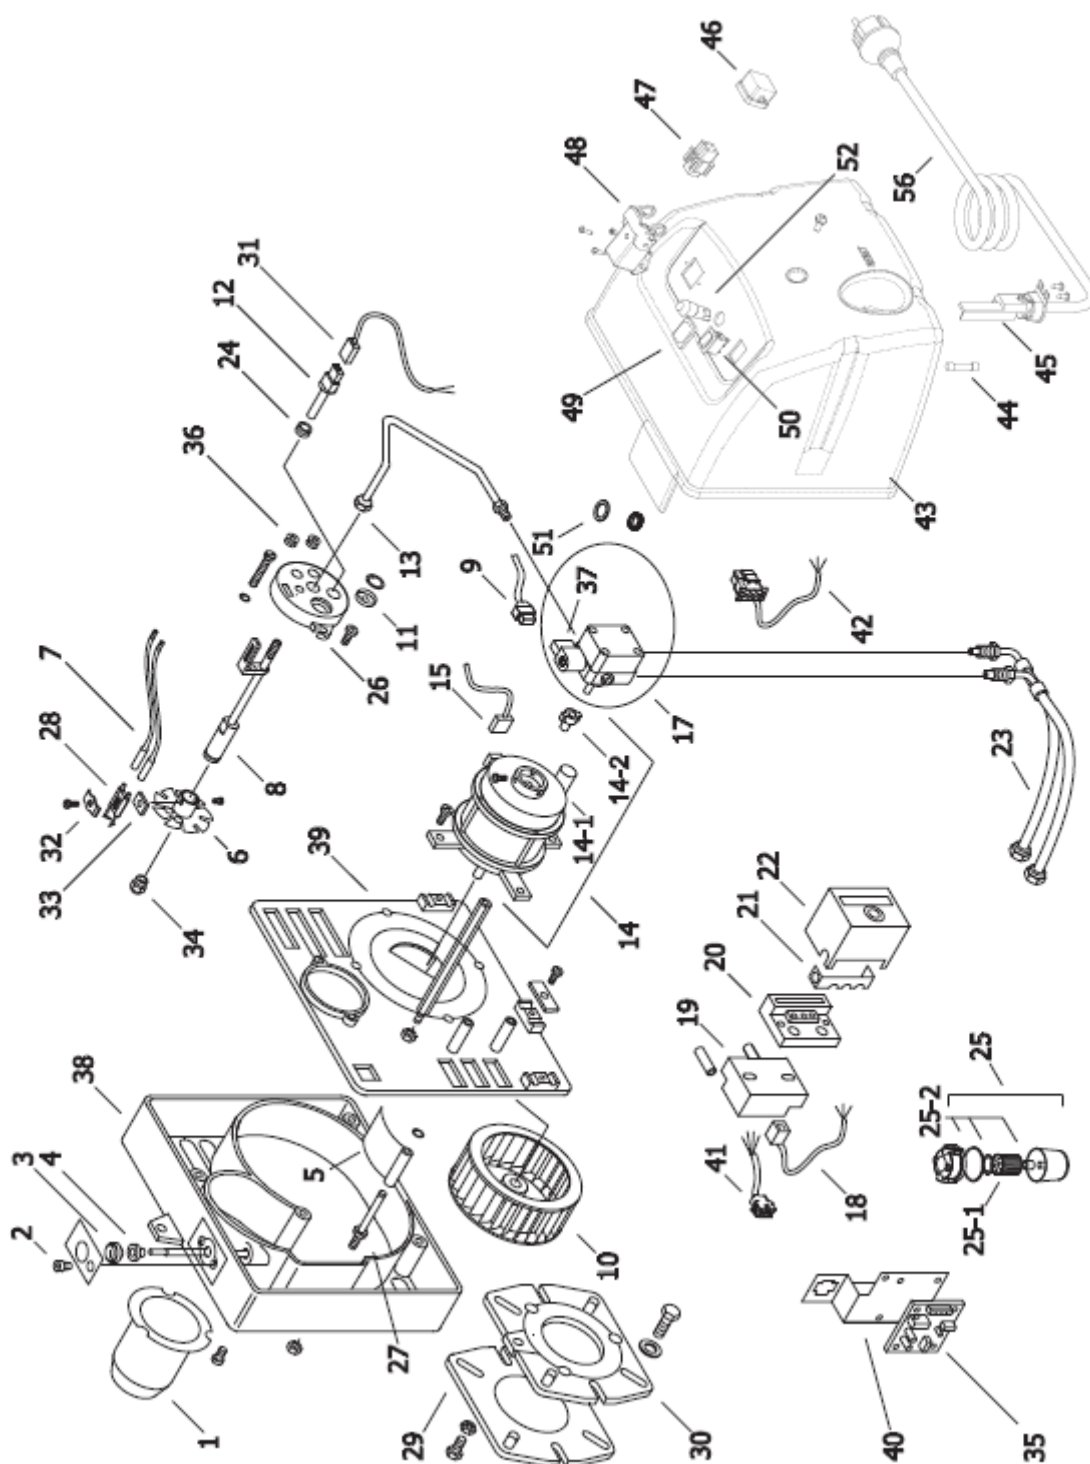

IFT 42

POS.	Code NR	Description	Rev. Emiss - Aug 2011
1	4117.128	BURNER CONE	
2	N/A	SCREW	
3	N/A	ROUND INDICATOR	
4	N/A	SLEEVE	
5	4117.129	BURNER FASTENER	
6	4117.130	BURNER DISC	
7	1*	ELECTRODE LINE	
8	4117.136	NOZZLE SUPPORT	
9	1*	ELECTROVALVE LINE	
10	4117.134	FAN	
11	N/A	FLAME CHECK	
12	4110.966	PHOTOCELL	
13	4117.135	COPPER TUBE	
14	4117.125	MOTOR	
14-1	4117.206	MOTOR CAPACITOR SIMEL	
14-2	4111.081	PUMP COUPLING SIMEL	
15	1*	MOTOR LINE	
17	4111.042	OIL PUMP DANFOSS	
17-1	4031.094	PUMP FILTER	
18	1*	TRANSFORMER LINE	
19	4117.141	TRANSFORMER DANFOSS	
20	4110.969	FLAME CONTROL BASE	
21	N/A	BASE PARTITION	
22	4110.968	CONTROL BOX SATRONIC	
23	4117.142	PLASTIC TUBE	
24	4117.207	PHOTOCELL ADAPTOR	
25	4031.070	FUEL FILTER	
25-1	4031.015	FILTER ELEMENT	
25-2	4111.116	FILTER SEAL	
26	N/A	BURNER FLANGE	
27	4117.146	BURNER FASTENER BOLT	
28	4117.195	ELECTRODE	
29	4117.148	BURNER FLANGE SEAL	
30	4117.194	BURNER FLANGE CONNECTION	
31	1*	PHOTOCELL LINE	
32	N/A	ELECTRODE CLAMP	
33	N/A	ELECTRODE SEAL	
34	4116.759	NOZZLE	
35	4117.151	PC BOARD	
36	N/A	RUBBER RING	
37-1	4031.195	VALVE	
37-2	4031.019	SPOOL	
38	4117.166	BURNER HOUSING	
39	4117.167	BURNER HOUSING PLATE	
40	4117.153	PC BOARD SUPPORT	
41	1*	4 PIN PLUG LINE	
42	2*	CONNECTION LINE	
43	4117.214	BURNER COVER	
44	4117.057	FUSE	
45	4111.038	CABLE FASTENER	
46	4117.080	THERMOSTAT CONNECTION PLUG	
47	4161.400	CONNECTION SOCKET	
48	4160.647	ANGULAR FIX CASE	
49	4104.336	COVER SWITCH	
50	4100.667	SWITCH	
51	4117.093	RUBBER SEAL	

IFT 42

52	4117.058	PILOT LAMP
53	2*	DUAL LINE BLUE
54	2*	DUAL LINE BLACK
55	2*	LINE WHITE
56	4111.153	POWER CORD (UK PLUG)
56	4111.449	POWER CORD (EUROPEAN PLUG)

1*	KIT LINES	4117.171
2*	KIT LINES BURNER COVER	4117.172

N/A = Parts Not Available